

Lumina Gateway Quick Start Installation Guide



1. Unbox and Connect the Lumina Gateway

- Review the opposite side of these instructions to power the Lumina Gateway
- The Lumina Gateway LED 1 will blink once per second to let you know it is ready to be discovered

2. Register at: LCS.leviton.com

- Browse to LCS.leviton.com and if you do not already have an account, request to create a new account
- Complete the setup form and check the e-mail address for a registration verification
- Open the verification e-mail and follow the steps to complete the registration

3. Create Your Organization

- Browse to LCS.leviton.com and log in with the newly created account
- Follow the prompts to create a new organization
- Enter the organization name and address of the company headquarters and press "Next"

4. Add a Location and a Lumina Gateway

- Select the desired organization
- Add and name a location, select the region and district, and input the address information
- Follow the prompt to add a controller to the location using the Device ID on the bottom of the Lumina Gateway:
- Ensure the controller is powered and connected to the network, then press "Add."

- 5. You are now ready to add Lumina RF devices, create new users and define schedules and logic
- Select Pricing Tier and Enter Billing Information to upgrade to enhanced features
- Dealer site features training videos, solution sheets, live chat, and more support at http://dealer.leviton.com
- Enjoy your Lumina Gateway!



leviton.com/gateway



Lumina Gateway – Cat. No. 74A00-1

WARNINGS AND CAUTIONS

- Read and understand all instructions. Follow all warnings and instructions marked on the product.
- Do not use this product near water e.g. near a tub, wash basin, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
- Never push objects of any kind into this product through openings, as they may touch dangerous voltages.
- Never install communications wiring or components during a lightning storm.
- Never install communications components in wet locations unless the components are designed specifically for use in wet locations.
- Never touch un-insulated wires or terminals unless the wiring has been disconnected at the network interface.
- Use caution when installing or modifying communications wiring or components.
- SAVE THESE INSTRUCTIONS

INSTALLATIONS

For best results, avoid areas with excessive metal or electrical wiring.

- 1. Unpack the Lumina Gateway. Package includes: Lumina Gateway, power adapter, Ethernet cable, and this document.
- 2. Plug one end of the supplied Ethernet cable into the jack labeled "ETHERNET/LAN" on the Lumina Gateway, marked "C" in Figure 1. Plug the opposite end of the network patch cable into a DHCP enabled network router, switch, or hub that is on the same local network as the Lumina Gateway.
- 3. Plug the barrel connector from the supplied 5VDC power adapter into the round receptacle labeled "5V" on the Lumina Gateway, marked "D" in Figure 1.
- 4. Plug the power adapter into an outlet.

OPERATION

1. When the Lumina Gateway is powered on, it takes up to two minutes to cycle through the self test and acquire an IP Address from the network router. When initially powering on, it is normal to see an immediate flicker of LED 1, followed approximately 10 seconds later by LED's 1 & 3 on solid.


A LED INDICATORS

B RESET BUTTON

C ETHERNET PORT
D POWER INPUT

- 2. While the Lumina Gateway is starting up, it takes up to two minutes to become operational.
- 3. The Lumina Gateway is operational when LED #1 begins to blink at a rate of once per second.
- 4. In normal operation, LED #3 blinks on Lumina RF activity.

FIGURE 1

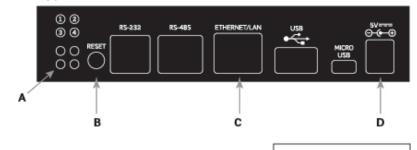

LED OPERATION

- LED 1 Blinks once per second under normal operation.
- LED 2 Identifies connectivity (on solid) when connected to Leviton Cloud Services (LCS).
- LED 3 Blinks when Lumina RF traffic occurs.
- LED 4 Not currently in use.

RESETTING TO FACTORY DEFAULTS

If it is determined that a reset to factory defaults is required, take the following steps:

- 1. Power down the Lumina Gateway.
- 2. Press and hold the button labeled "RESET" on the Lumina Gateway, which is marked "B" in Figure 1.
- 3. Power on the Lumina Gateway while continuing to hold the "RESET" button.
- 4. Wait for the LED indicators 1, 2, 3, and 4 to illuminate in sequence. NOTE: When initially powering, it is normal to see an immediate flicker of LED 1, followed approximately 10 seconds later by LED's 1 & 3 on solid. Continue to hold until all 4 LED's light up in sequence.
- 5. Release the "RESET" button within 5 seconds after all LED indicators are illuminated.
- 6. All LED indicators will flash off, and then back on.
- 7. The Factory Reset is completed once LED indicator #1 begins blinking again.

COPYRIGHT AND TRADEMARK INFORMATION

This document and all its contents herein are subject to and protected by international copyright and other intellectual property rights and are the property of Leviton Manufacturing Co., Inc, its subsidiaries, affiliates and/or licensors.

Use herein of third party trademarks, service marks, trade names, brand names and/or product names are for informational purposes only, are/may be the trademarks of their respective owners; such use is not meant to imply affiliation, sponsorship, or endorsement.

No part of this document may be reproduced, transmitted or transcribed without the express written permission of Leviton Manufacturing Co., Inc.

FOR CANADA ONLY

For warranty information and/or product returns, residents of Canada should contact Leviton in writing at Leviton Manufacturing of Canada Ltd to the attention of the Quality Assurance Department, 165 Hymus Blvd, Pointe-Claire (Quebec), Canada H9R 1E9 or by telephone at 1 800 405-5320.

LEVITON LIMITED WARRANTY

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that products manufactured by Leviton under the Leviton brand name ("Product") will be free from defects in material and workmanship for the time periods indicated below, whichever is shorter: • OmniPro II and Lumina Pro: three (3) years from installation or 42 months from manufacture date. • Omni LTe, Omni IIe, and Lumina: two (2) years from installation or 30 months from manufacture date. • BitWise Controllers, Accessories: two (2) years from installation or 30 months from manufacture date. • Lumina Gateway Controllers: two (2) years from installation or 30 months from manufacture date. • Thermostats, Accessories: two (2) years from installation or 30 months from manufacture date. • Batteries: Rechargeable batteries in products are warranted for ninety (90) days from date of purchase. Note: Primary (non-rechargeable) batteries shipped in products are not warranted. Products with Windows® Operating Systems: During the warranty period, Leviton will restore corrupted operating systems to factory default at no charge, provided that the product has been used as originally intended. Installation of non-Leviton software or modification of the operating system voids this warranty. Leviton's obligation under this Limited Warranty is limited to the repair or replacement, at Leviton's option, of Product that fails due to defect in material or workmanship. Leviton reserves the right to replace product under this Limited Warranty with new or remanufactured product. Leviton will not be responsible for labor costs of removal or reinstallation of Product. The repaired or replaced product is then warranted under the terms of this Limited Warranty for the remainder of the Limited Warranty time period or ninety (90) days, whichever is longer. This Limited Warranty does not cover PC-based software products. Leviton is not responsible for conditions or applications beyond Leviton's control. Leviton is not responsible for issues related to improper installation, including failure to follow written Installation and operation instructions, normal wear and tear, catastrophe, fault or negligence of the user or other problems external to the Product. To view complete warranty and instructions for returning product, please visit us at www.leviton.com.