

## **LCL**


## LENS REMOVAL INSTRUCTIONS

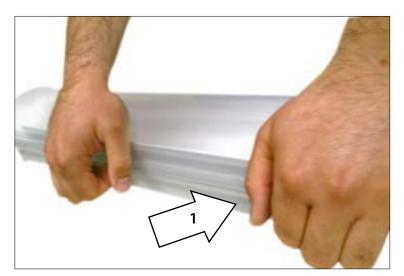

1. Push down on one side to release lock.

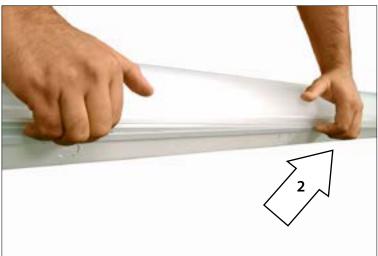

2. Place fingers under rib and pull outward from center of fixture.

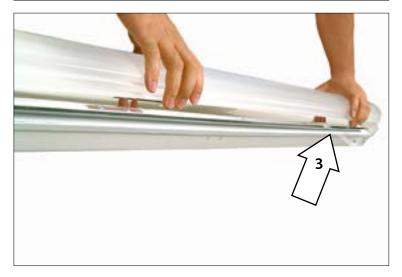

3. Rotate lens counterclockwise to release from rear reflector.

Page 1/1 Rev. 08/19/14 LED / LCL