

Stirrup Connector

Hot-Stick Installation Instructions Bulletin # 004



1) Separate insert "Interface" from connector. Do not loose the insert.



3) Gently unscrew bolt to full open position.



5) Flip connector over and position as pictured.



2) Read markings to verify correct wire range.



4) Hold center of bail in the hot-stick.



6) Position connector over main line where desired.

(CONTINUED)

(CONTINUED)



7) Lower bail into position.



9) Tighten Hot-Stick on Interface.



11) Release interface from Hot-Stick.



8) Insert interface on Hot-Stick in the same direction that it will be inserted into the connection. This will allow easy Hot-Stick removal.



10) Slide interface along main wire and into the connector until it reaches the stop.



12) Use a universal socket stick and 3/4" socket to tighten bolt until Hex Head shears off. The bolt should break off at 110-130 INLBS (12-14 NM)