



# Harmony ST6

High-resolution and cost-efficient  
basic HMI



# Harmony

## Discover **Harmony**

Advanced operator interface and industrial relays

**Harmony** operator interface and industrial relays enhance operational efficiency and equipment availability across industrial and building applications. **Harmony** includes intelligent connected products and edge terminals that visualize, gather and process data, enabling informed operator decisions

## Explore our offer

- **Harmony** Push Buttons and Switches
- **Harmony** HMI Operator Terminals, IPC and EdgeBox
- **Harmony** Signaling Devices
- **Harmony** Electrical Relays
- **Harmony** Safety

Life Is On

**Schneider**  
Electric


# Quick access to product information

## Get technical information about your product

References

**Modicon TM3**  
I/O expansion modules for Modicon controllers  
Analog I/O modules


References	Modicon TM3 analog input modules	Input range	Resolution	Input terminal block (T)	Reference	Weight (kg)
2 voltage/current inputs	-10...+10 VDC 0...+10 VDC 0...20 mA / -20 mA	16 bits of	0.001	TM3AI20	0.150	
		16 bits of sign	0.002	TM3AI20S	0.150	
4 voltage/current inputs	-10...+10 VDC 0...+10 VDC 0...20 mA / -20 mA	12 bits of	0.001	TM3AI40	0.200	
		11 bits of sign	0.002	TM3AI40S	0.200	
4 voltage/current or temperature inputs (I, K, R, S, E, T, N, E, C)	-10...+10 VDC 0...+10 VDC 0...20 mA / -20 mA	16 bits of	0.001	TM3AI80	0.200	
		16 bits of sign	0.002	TM3AI80S	0.200	
4 differential temperature inputs (I, K, R, S, E, T, N, E, C)	-10...+10 VDC 0...+10 VDC 0...20 mA / -20 mA	16 bits of	0.001	TM3DI80	0.200	
		16 bits of sign	0.002	TM3DI80S	0.200	
4 voltage/current	-10...+10 VDC	12 bits of	0.001	TM3AI40	0.150	
		11 bits of sign	0.002	TM3AI40S	0.150	

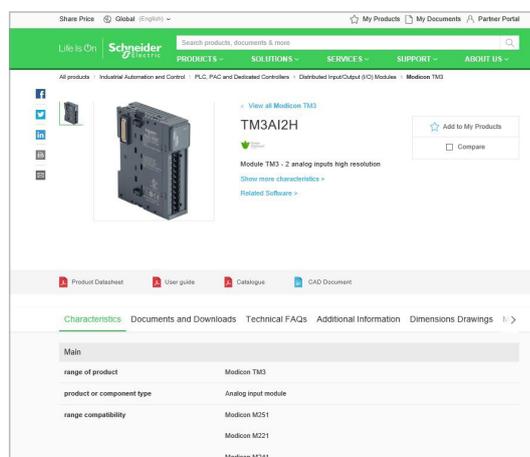


Each commercial reference presented in a catalog contains a hyperlink. Click on it to obtain the technical information of the product:

- Characteristics, Dimensions and drawings, Mounting and clearance, Connections and schemas, Performance curves
- Product image, Instruction sheet, User guide, Product certifications, End of life manual

## Find your catalog

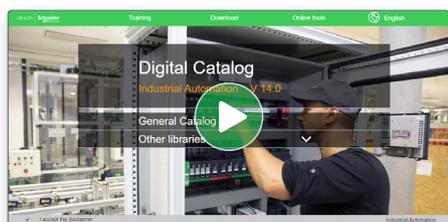

- > With just 3 clicks, you can access the Industrial Automation and Control catalogs, in both English and French
- > Consult digital automation catalogs at [Digi-Cat Online](#)

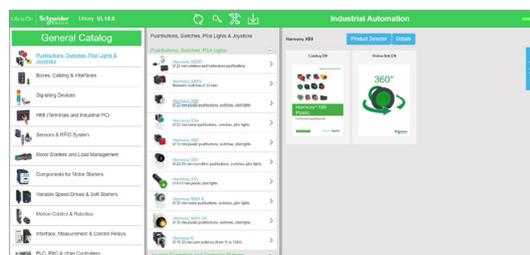


- Up-to-date catalogs
- Embedded product selectors, 360° pictures
- Optimized search by commercial references

## Select your training



- > Find the right [Training](#) for your needs on our Global website
- > Locate the training center with the selector tool, using this [link](#)

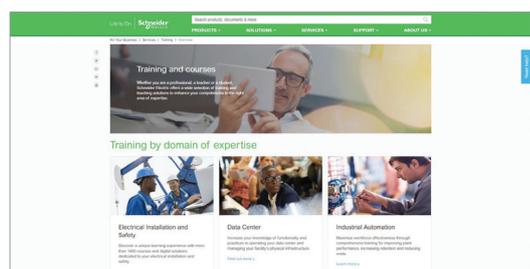

Life Is On

Schneider Electric

# General contents

## Harmony ST6 basic HMI panels

### ■ General presentation

- Refined hardware design ..... [page 2](#)
- Easy to install ..... [page 2](#)
- Visualization ..... [page 3](#)
- Easy to use ..... [page 4](#)
- Connected and secure ..... [page 5](#)

**Selection guide** ..... [page 6](#)

### ■ Presentation

- Environment ..... [page 12](#)
- Software functions ..... [page 13](#)
- Communication ..... [page 14](#)

### ■ Functions

- Panel operating modes
  - Edit mode ..... [page 15](#)
  - Operating mode ..... [page 15](#)

### ■ Description

- Panels with 4" and 7" touchscreens ..... [page 16](#)
- Panels with 10", 12", and 15" touchscreens ..... [page 17](#)
- Modular panels with 4" and 7" display modules and rear module ..... [page 18](#)

### ■ References

- Basic/Web/modular HMI panels ..... [page 19](#)
- Accessories ..... [page 20](#)
- Separate parts ..... [page 20](#)
- Spare parts ..... [page 21](#)

■ **Connection system** ..... [page 22](#)

■ **Product reference index** ..... [page 26](#)

# Harmony ST6

High-resolution and cost-efficient basic HMI

## Harmony ST6

Basic, web, and modular HMI panels



Harmony ST6

Harmony ST6 HMI panels range in sizes from 4" to 15" wide combining the exceptional quality of good graphics and stylish design. They are available in basic, modular, web and Edge Box. The ST6 and STM6 panels offer an improved user operation experience through an intuitive design powered by EcoStruxure Operator Terminal Expert software. The STW6 panels have a pre-installed browser that provides a ready-to-use agnostic terminal allowing all devices to be visualized within an HTML5 server.


The Edge Box HMI, thanks to the power of EcoStruxure™ Machine SCADA Expert software, provides an affordable Box ready for Cloud services.

EcoStruxure Machine brings together key technologies for product connectivity and on-premise edge control, and cloud technologies to provide analytics and digital services. EcoStruxure Machine helps you bring more innovation and added value to your customers throughout the entire machine life cycle.

The Harmony ST6/STW6/STM6 and the Edge Box HMI versions meet IIoT challenges at the Connected Products level, by providing secure communication, connectivity, and efficiency to the required software and applications at the Edge Control level, thus opening more business opportunities.


## EcoStruxure™ for Industry

Innovation At Every Level

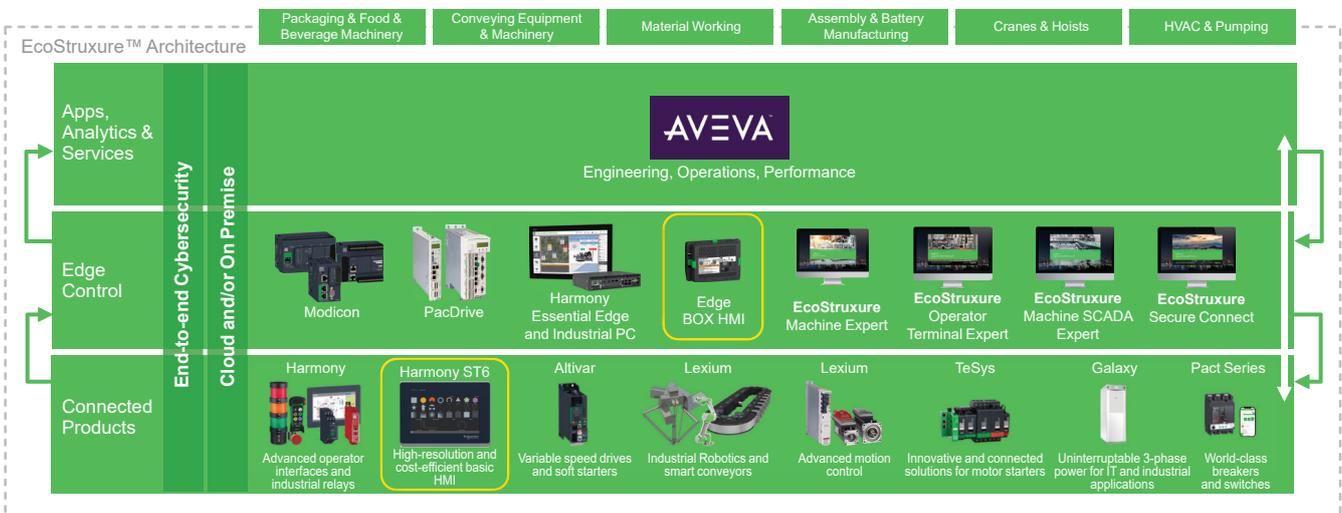

### Refined hardware design

- > A well-finished appearance: CNC machining, processing, and color coating like a smartphone gives it a high-grade finish

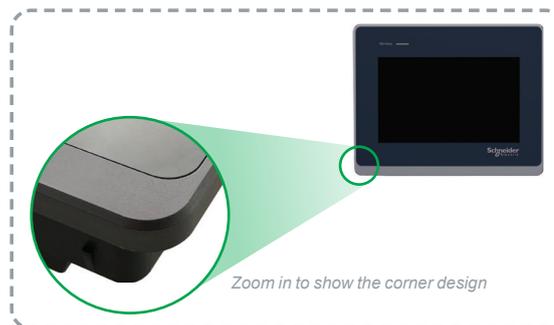


### Easy to install

- > Quick mounting without screwdriver for ST6/STW6 panels:

- Spring clip for 4" panel (1)

- Tool-free fastener for 7", 10", 12", and 15" panels

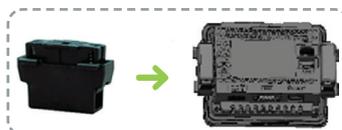

(1) This accessory has to be ordered separately.

## + Harmony ST6 → An HMI adapted for IIoT and cybersecurity


## Easy to install (continued)

- > Electronic manual via QR code for easy in-field maintenance without PC or paper for all ST6 panels




- > Easy like a pushbutton mounting for STM6 panels:

- Easy mounting on cabinet with 22 mm hole for a fast, no error and tool-free HMI

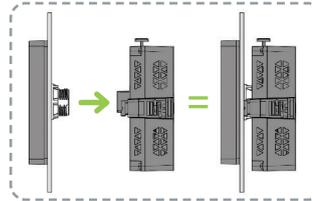

- Easy for maintenance with modularity
- Easy for applications with separation cable accessory

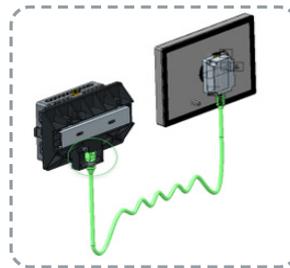

## Visualization

- > High-quality wide screen, high resolution with 16 million colors
- > Improved graphics with truetype fonts, gradient, transparency, and anti-aliasing



Truetype fonts



Gradient transparency



Anti-aliasing

- > Theme and color set for supporting situational awareness



Day mode



Custom mode



Night mode



Alarm mode

+ Attractive aesthetics and visualization for simple machines

## Easy to use

### Harmony ST6/STM6 basic HMI

- > With the Multi-screen function, more information can be displayed on a single screen



Multi-screen function

- > With the Layout Objects (Dock Panel) function:
  - Several pages can be embedded in one screen and users can navigate in each section independently
  - Screens are automatically resized to fit the frame
  - Frame sizes can be dynamically changed to show different content



Click this tab

See more hidden information

Layout objects

- > With WebViewer feature from EcoStruxure Operator Terminal Expert, all Harmony ST6/STM6 products can be visualized and operated remotely on PC/Tablet/Smartphone
- > With the ability to switch between text-based script and blocky-based script, designer now have the flexibility and efficient way to create custom script operations
- > With Mobile Access function from EcoStruxure Machine SCADA Expert, Harmony Edge Box HMI can be visualized and operated remotely on PC/Tablet/Smartphone




- > With Harmony STM6 Gateway Box and WebViewer function or with the Harmony Edge Box HMI and Mobile Access function, the new Harmony HMISTM6 can become a Faceless HMI for applications that doesn't need a full time operator screen

## Easy to use (continued)

### Harmony STW6 basic web HMI

- > The panel with HTML5 Browser function enables:
  - Easy display of Title bar by swiping the top of screen for full navigation
  - Access to Menu for configuration of different servers and Web terminals addresses
  - Visualization of all Web content of HTTP servers within industrial devices (1)

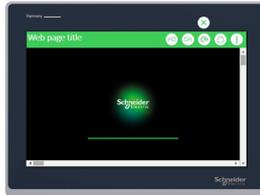


### Harmony Edge Box HMI

- > EcoStruxure Machine SCADA Expert functions enables storing data everywhere:
  - Easy settings of Data for Clouds like Azure, Amazon Web Services & Aveva Insight Links
  - Small Edge features with data stamping and data treatment (filter, convert, compute, condition) before transfer to the Cloud
  - Local & external database storage



## Connected and secure

- > Harmony ST6 offer is uniquely positioned in "Connected Products" within the EcoStruxure platform for enhanced cybersecurity
- > Ethernet Download disabled by default <Runtime>
- > OP user logged out after predefined idle time <RunTime>
- > Security check performed during booting <CPU>
- > Secure Ethernet download is supported by IPSec and password protected project file (supported in EcoStruxure Operator Terminal Expert v3.1 service pack 1 or later)
- > EcoStruxure Secure Connect allows secure remote access to the device via a private, point-to-point connection (service pre-installed on all Harmony ST6 family) and HMISTM6 Gateway Box or HMISTM6 Edge Box HMI becomes an affordable all access point

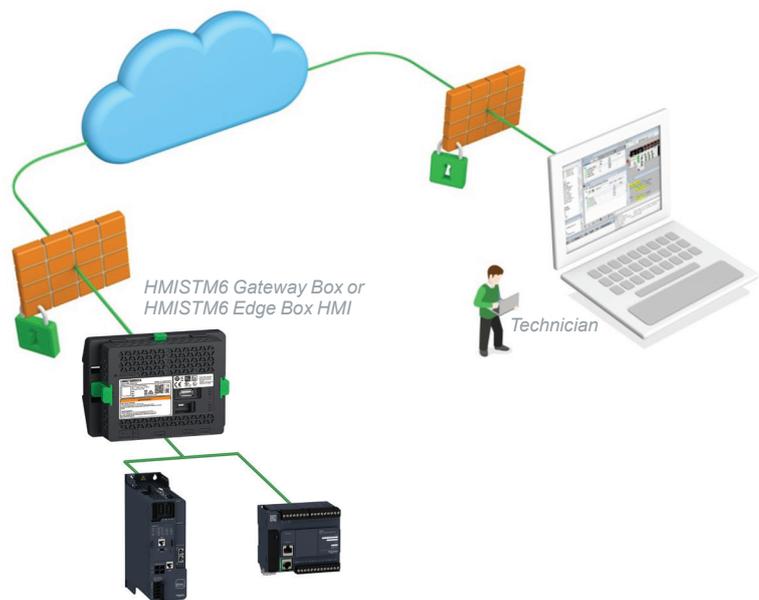

(1) As there may be limited access to all features of the HTML5 connected server, please contact your local Schneider Electric representative for more details.



+ Uniquely positioned as "Connected Products" within EcoStruxure platform

# Harmony ST6

High-resolution and cost-efficient basic HMI  
Harmony ST6 Basic HMI panels

<b>Applications</b>		Display of text messages, graphic objects, and synoptic views Control and configuration of data	
<b>Type of display module</b>		Basic HMI panels	
			
<b>Display</b>	Touchscreen size	4.3" W	7" W
	Resolution (pixels)	480 x 272 pixels, 16 million colors	800 x 480 pixels (WVGA), 16 million colors
	Type	TFT Color LCD, single-touch analogue resistive	
<b>Degree of protection</b>		IP65F, Type 1, Type 4X (indoor use only), Type 13 (on the front panel when properly installed in an enclosure)	
<b>Functions</b>	Brightness control	16 levels (adjusted with touch panel or software)	
	Backlight service life	50,000 hrs or more (until backlight brightness decreases to 25%)	
<b>Memory</b>	Device memory	512 MB	1 GB
	Application memory	128 MB	128 MB
	Backup memory	512 KB NVRAM	
<b>Dimensions</b>	External W × H × D mm/in.	134.5 x 108.5 x 43/5.3 x 4.27 x 1.69	208 x 153 x 45/8.19 x 6.02 x 1.77
	Cut-out W × H mm/in.	118.5 x 92.5/4.67 x 3.64	190 x 135/7.48 x 5.31
<b>Weight</b>	kg/lb	0.400/0.880	0.800/1.760
<b>Supply voltage</b>		24 V ~	
<b>Environment</b>		Ambient air temperature 0...50 °C/32... 122 °F	
<b>Communication</b>	Asynchronous serial link	RS-232C/485 (COM1)	RS-232C (COM1), RS-485 (COM2)
	USB ports	1x USB 2.0 (Type A), 1x USB 2.0 Micro-B	
	Buses and networks	1x Ethernet TCP/IP (10BASE-T/100BASE-TX)	2x Ethernet TCP/IP (10BASE-T/100BASE-TX)
<b>RTC</b>		Yes	
<b>Conformity to standards and certifications</b>		CE, China RoHS, REACH, KC, EN (61000-6-4/61000-6-2/ 61131-2), UL 61010-2-201, CSA C22.2 No 61010-2-201	
<b>Operating system</b>		Harmony (800 MHz ARM Cortex-A8 CPU)	
<b>Development software</b>		EcoStruxure Operator Terminal Expert (1)	
<b>Terminal reference</b>		<b>HMIST6200, HMIST6200FW (2)   HMIST6400</b>	
<b>Pages</b>		19	

(1) For more information on EcoStruxure Operator Terminal Expert, please refer to the [DIA5ED2140703EN](#) catalog.  
(2) No Logo models, without the Schneider Electric logo on front module.

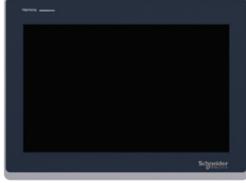
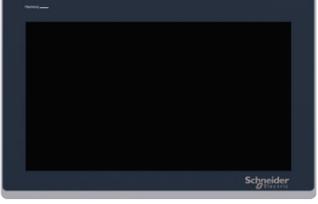
<b>Applications</b>			Display of text messages, graphic objects, and synoptic views Control and configuration of data			
<b>Type of display module</b>			Basic HMI panels			
						
<b>Display</b>	Touchscreen size	10.1" W	12.1" W	15.6" W		
	Resolution (pixels)	1,024 x 600 pixels (SVGA), 16 million colors	1,280 x 800 pixels (WXGA), 16 million colors	1,366 x 768 pixels (FWXGA), 16 million colors		
	Type	TFT Color LCD, single-touch analog resistive				
<b>Degree of protection</b>			IP65F, Type 1, Type 4X (indoor use only), Type 13 (on the front panel when properly installed in an enclosure)			
<b>Functions</b>			16 levels (adjusted with touch panel or software)			
<b>Supply voltage</b>			24 V ~			
<b>Environment</b>			Ambient air temperature 0...50 °C/32... 122 °F			
<b>Communication</b>	Asynchronous serial link	RS-232C (COM1), RS-485 (COM2)	RS-232C (COM1), RS-485 (COM2)	RS-232C (COM1), RS-485 (COM2)		
	USB ports	1x USB 2.0 (Type A), 1x USB 2.0 Micro-B				
	Buses and networks	2x Ethernet TCP/IP (10BASE-T/100BASE-TX)				
<b>RTC</b>			Yes			
<b>Conformity to standards and certifications</b>			CE, China RoHS, REACH, KC, EN (61000-6-4/61000-6-2/ 61131-2), UL 61010-2-201, CSA C22.2 No 61010-2-201			
<b>Operating system</b>			Harmony (800 MHz ARM Cortex-A8 CPU)			
<b>Development software</b>			EcoStruxure Operator Terminal Expert (1)			
<b>Terminal reference</b>			<b>HMIST6500, HMIST6500FW (2)   HMIST6600, HMIST6600FW (2)   HMIST6700</b>			
<b>Pages</b>			19			

(1) For more information on EcoStruxure Operator Terminal Expert, please refer to the [DIA5ED2140703EN](#) catalog.  
(2) No Logo models, without the Schneider Electric logo on front module.

# Harmony ST6

High-resolution and cost-efficient basic HMI  
Harmony STW6 Basic Web HMI panels

<b>Applications</b>		Display of text messages, graphic objects, and synoptic views Control and configuration of data	
<b>Type of display module</b>		Basic Web HMI panels	
			
<b>Display</b>	Touchscreen size	4.3" W	7" W
	Resolution (pixels)	480 x 272 pixels, 16 million colors	800 x 480 pixels (WVGA), 16 million colors
	Type	TFT Color LCD, single-touch analog resistive	
<b>Degree of protection</b>		IP65F, Type 1, Type 4X (indoor use only), Type 13 (on the front panel when properly installed in an enclosure)	
<b>Functions</b>	Brightness control	16 levels (adjusted with touch panel or software)	
	Backlight service life	50,000 hrs or more (until backlight brightness decreases to 25%)	
<b>Memory</b>	Device memory	512 MB	
	User data memory	512 MB	
	Backup memory	128 KB	
<b>Dimensions</b>	External W × H × D mm/in.	134.5 x 108.5 x 43/5.3 x 4.27 x 1.69	208 x 153 x 45/8.19 x 6.02 x 1.77
	Cut-out W × H mm/in.	118.5 x 92.5/4.67 x 3.64	190 x 135/7.48 x 5.31
<b>Weight</b>	kg/lb	0.400/0.880	0.800/1.760
<b>Supply voltage</b>		24 V $\overline{\text{---}}$	
<b>Environment</b>		Ambient air temperature 0...50 °C/32...122 °F	
<b>Communication</b>	Asynchronous serial link	–	
	USB ports	1x USB 2.0 (Type A), 1x USB 2.0 Micro-B	
	Buses and networks	1x Ethernet TCP/IP (10BASE-T/100BASE-TX)	2x Ethernet with switch function for daisy chain (10BASE-T/100BASE-TX)
<b>RTC</b>		No	
<b>Conformity to standards and certifications</b>		CE, China RoHS, REACH, KC, EN (61000-6-4/61000-6-2/ 61131-2), UL 61010-2-201, CSA C22.2 No 61010-2-201	
<b>Operating system</b>		Harmony (800 MHz ARM Cortex-A8 CPU)	
<b>Development software</b>		Linux Browser HTML5	
<b>Terminal reference</b>		<b>HMISTW6200</b>	<b>HMISTW6400</b>
<b>Pages</b>		19	
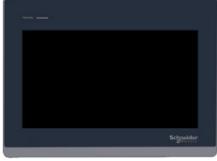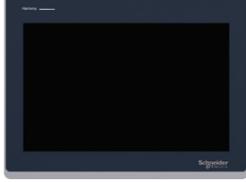
<b>Applications</b>			Display of text messages, graphic objects, and synoptic views Control and configuration of data
<b>Type of display module</b>			Basic Web HMI panels
			
			
			
<b>Display</b>	Touchscreen size	10.1" W	12.1" W
	Resolution (pixels)	1,024 x 600 pixels (SVGA), 16 million colors	1,280 x 800 pixels (WXGA), 16 million colors
	Type	TFT Color LCD, single-touch analog resistive	
<b>Degree of protection</b>		IP65F, Type 1, Type 4X (indoor use only), Type 13 (on the front panel when properly installed in an enclosure)	
<b>Functions</b>	Brightness control	16 levels (adjusted with touch panel or software)	
	Backlight service life	50,000 hrs or more (until backlight brightness decreases to 25%)	
<b>Memory</b>	Device memory	512 MB	
	User data memory	512 MB	
	Backup memory	128 KB	
<b>Dimensions</b>	External W × H × D mm/in.	273 x 203 x 47/10.75 x 7.99 x 1.85	313 x 235 x 50/12.32 x 9.25 x 1.97
	Cut-out W × H mm/in.	255 x 185/10.04 x 7.28	295 x 217/11.61 x 8.54
<b>Weight</b>	kg/lb	1.300/2.870	1.800/3.970
<b>Supply voltage</b>		24 V $\overline{\text{---}}$	
<b>Environment</b>		Ambient air temperature 0...50 °C/32...122 °F	
<b>Communication</b>	Asynchronous serial link	–	
	USB ports	1x USB 2.0 (Type A), 1x USB 2.0 Micro-B	
	Buses and networks	2x Ethernet with switch function for daisy chain (10BASE-T/100BASE-TX)	
<b>RTC</b>		No	
<b>Conformity to standards and certifications</b>		CE, China RoHS, REACH, KC, EN (61000-6-4/61000-6-2/ 61131-2), UL 61010-2-201, CSA C22.2 No 61010-2-201	
<b>Operating system</b>		Harmony (800 MHz ARM Cortex-A8 CPU)	
<b>Development software</b>		Linux Browser HTML5	
<b>Terminal reference</b>		<b>HMISTW6500</b>	<b>HMISTW6600</b>
<b>Pages</b>		19	



More technical information on [www.se.com](http://www.se.com)



More technical information on [www.se.com](http://www.se.com)

# Harmony ST6

High-resolution and cost-efficient basic HMI  
Harmony STM6 Basic Modular HMI panels

<b>Applications</b>	Display of text messages, graphic objects, and synoptic views Control and configuration of data	
<b>Type of module</b>	Basic Modular HMI Gateway Box	Edge Box HMI



<b>Display</b>	Touchscreen size	–	
	Resolution (pixels)	–	
	Type	–	
<b>Degree of protection</b>		IP20 installed on Din Rail	
<b>Functions</b>	Brightness control	–	
	Backlight service life	–	
<b>Memory</b>	Device memory	1 GB	
	Application memory	128 MB	
	Backup memory	512 KB	
<b>Dimensions</b>	External W × H × D (mm/in.)	150.49 x 109.97 x 63.3/5.92 x 4.33 x 2.49	
	Cut-out (mm/in.)	–	
<b>Weight</b>	Display (kg/lb)	–	
	Rear (kg/lb)	0.456/1.005	
<b>Supply voltage</b>		24 V $\overline{\text{---}}$	
<b>Environment</b>		Ambient air temperature 0...60 °C/32...140 °F	
<b>Communication</b>	Asynchronous serial link	RS-232C/485 (COM1)	
	USB ports	1x USB 2.0 (Type A), 1x USB 2.0 Micro-B	
	Buses and networks	2x Ethernet TCP/IP (10BASE-T/100BASE-TX)	
<b>RTC</b>		Yes	
<b>Conformity to standards and certifications</b>		CE, China RoHS, REACH, KC, EN (61000-6-4/61000-6-2/ 61131-2), UL 61010-2-201, CSA C22.2 No 61010-2-201, ATEX Zone2/22, Marine (2)	
<b>Operating system</b>		Harmony (800 MHz ARM Cortex-A8 CPU)	
<b>Development software</b>		EcoStruxure Operator Terminal Expert (1)	EcoStruxure Machine SCADA Expert (3)
<b>Terminal reference</b>		<b>HMISTM6BOX</b>	<b>HMISTM6BOXIOT</b>
<b>Pages</b>		19	

(1) For more information on EcoStruxure Operator Terminal Expert, please refer to the [DIA5ED2140703EN](#) catalog.  
 (2) DNV-GL, RINA, ABS.  
 (3) HMISTM6BOXIOT to EMSE catalog  
 (4) No Logo models, without the Schneider Electric logo on front module.

<b>Applications</b>	Display of text messages, graphic objects, and synoptic views Control and configuration of data	
<b>Type of module</b>	Basic Modular HMI panels	



4.3" W	7" W
480 x 272 pixels, 16 million colors	800 x 480 pixels (WVGA), 16 million colors
TFT Color LCD, single-touch analog resistive	
IP65F, Type 1, Type 4X (indoor use only), Type 12 and Type 13 (on the front panel when properly installed in an enclosure)	
16 levels (adjusted with touch panel or software)	
50,000 hrs or more (until backlight brightness decreases to 25%)	
1 GB	
128 MB	
512 KB	
145.60 x 108.20 x 53.90/5.73 x 4.25 x 2.12	201.20 x 137.20 x 57.70/7.92 x 5.40 x 2.27
Hole diameter 22.5/0.88	
0.220/0.490	0.490/1.080
0.270/0.600	
24 V $\overline{\text{---}}$	
Ambient air temperature 0...50 °C/32...122 °F	
RS-232C/485 (COM1)	
1x USB 2.0 (Type A), 1x USB 2.0 Micro-B	
2x Ethernet TCP/IP (10BASE-T/100BASE-TX)	
Yes	
CE, China RoHS, REACH, KC, EN (61000-6-4/61000-6-2/ 61131-2), UL 61010-2-201, CSA C22.2 No 61010-2-201, ATEX Zone2/22, Marine (2)	
Harmony (800 MHz ARM Cortex-A8 CPU)	
EcoStruxure Operator Terminal Expert (1)	
<b>HMISTM6200, HMISTM6200FW (4)</b>	
<b>HMISTM6400, HMISTM6400FW (4)</b>	
19	

(1) For more information on EcoStruxure Operator Terminal Expert, please refer to the [DIA5ED2140703EN](#) catalog.  
 (2) DNV-GL, RINA, ABS.  
 (3) HMISTM6BOXIOT to EMSE catalog  
 (4) No Logo models, without the Schneider Electric logo on front module.

# Harmony ST6

## High-resolution and cost-efficient basic HMI



Harmony ST6/STW6/STM6 color touchscreen panels

### Presentation

Harmony ST6 HMI panels provide high-quality graphics and stylish design. They are color touchscreen panels (TFT technology) available in three versions and two version with only a Box without screen:

- HMIST6 Basic: 4.3", 7", 10.1", 12.1", and 15.6" panels
- HMISTW6 Web: 4.3", 7", 10.1", 12.1", and 15.6" panels
- HMISTM6 Modular: 4.3" and 7" panels, faceless Basic HMI Gateway Box
- HMISTM6 Edge Box HMI

Their efficiency, flexibility, connectivity, and security features make them suitable for use in food and beverage, HVAC&R, pumping, and packaging applications.

### Environment

The Harmony ST6/STW6/STM6 Basic range has been designed in accordance with numerous standards, certifications, and requirements:

■ Compliance standards:

- Europe:
  - Low Voltage Directive (2014/35/EU), EMC Directive (2014/30/EU), Programmable Controllers: EN 61131-2, EN 61000-6-4, EN 61000-6-2
- Australia:
  - RCM
  - EN 61000-6-4
- Korea
  - KC
  - KN 11
  - KN 61000-6-2
- Russia, Belarus, Kazakhstan:
  - EAC

■ Agency certifications:

- Third-party certified standards: Underwriters Laboratories Inc., UL 61010-2-201 and CSA C22.2 No. 61010-2-201, Industrial Control Equipment

■ Operating temperature: up to 50 °C/22 °F

- Degree of protection: IP65F, Type 1, Type 4X (indoor use only), Type 13 (on the front panel when properly installed in an enclosure)

■ Vibration resistance:

- IEC/EN 61131-2 compliant, 5...9 Hz single amplitude 3.5 mm/0.14 in., 9...150 Hz fixed acceleration: 9.8 m/s<sup>2</sup>, X, Y, Z directions for 10 cycles (approximately 100 minutes)

■ Shock resistance

- IEC/EN 61131-2 compliant, 147 m/s<sup>2</sup>, X, Y, Z directions for 3 times

■ Electrical fast transient/burst

- IEC 61000-4-4
- 2 kV: Power port (display unit)
- 1 kV: Signal ports


■ Electrostatic discharge immunity

- Contact discharge method: 6 kV
- Air discharge method: 8 kV (IEC/EN 61000-4-2 Level 3)

The modular Harmony STM6 and Harmony Edge Box HMI also certifies:

■ Agency certifications:

- Underwriters Laboratories Inc., UL 121201 and CSA C22.2 N°213 for Industrial Control Equipment used in Class I, Division 2 Hazardous (Classified) Locations
- IECEx/ATEX for use in Zone 2 gas/Zone 22 dust
- Merchant Navy, following IACS E10

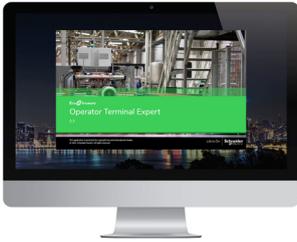

EcoStruxure Operator Terminal Expert

### Software functions


#### Harmony ST6 Basic and STM6 Modular HMI panels

The Harmony ST6 and STM6 are configured using EcoStruxure Operator Terminal Expert software. This software and its user interface bring greater ease of use to project development and online updates. EcoStruxure Operator Terminal Expert allows you to create HMI applications with an innovative navigation concept on Harmony ST6.

These panels with EcoStruxure Operator Terminal Expert software offers the following functions:

- Display of animated synoptic views with 8 types of animation (pressing the touch panel, color changes, filling, movement, rotation, size, visibility, and value display)
- Control, modification of numeric and alphanumeric values
- Display of current date and time
- Real-time and trending curves with log
- Alarm display, alarm log, and management of alarm groups
- Multi-window
- Recipe management
- Multi-language support in the Buildtime editor (10 languages)
- Storage of the application logs on USB stick
- Support of USB Barcode reader
- WebViewer for remote visualization on PC/Tablet/Smartphone (2)

For more information on EcoStruxure Operator Terminal Expert, please refer to the [DIA5ED2140703EN](#) catalog.

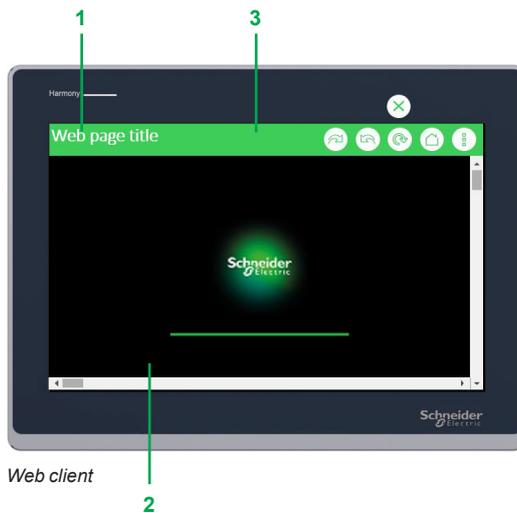

Web client

#### Harmony STW6 Web HMI panels

Harmony STW6 uses the Web browser which acts like a Web client to display screens (1) that run Web servers on the same Intranet.

- 1 Displays the title of the Web server page or the URL when the page does not have a title
- 2 Web page area
- 3 Title bar
  - Moves to the previous page
  - Moves to the next page
  - Icon appears while loading the Web page instead of Refresh page icon and when clicked will stop loading the page
  - Reloads the Web page and icon changes to "Stop loading"
  - Displays the Web server screen set in Server → Start Page
  - Touch this icon to display the sub-menu

#### Harmony Edge Box HMI

- > Harmony Edge Box HMI is configured using EcoStruxure Machine SCADA Expert. This software allows to collect data with different drivers on OT devices and to push data on IT side with different Cloud drivers. In addition basic HMI features can be configured on this Box :
  - Display of animated synoptic and control of numeric, alphanumeric values remotely via Web Interface.
  - Scheduler Task with date & time
  - Mathematic Task
  - Alarm Task with log
  - Trend Task with log
  - Storage of the application logs in internal Flash memory, on USB sticks and on External DataBase
  - Remote Visualization with Mobile Access function

For more information on EcoStruxure Machine SCADA Expert, please refer to the [DIA5ED2171201EN](#) catalog.

(1) For supported models, please contact your local Schneider Electric support representative.  
 (2) WebViewer function is an option of EcoStruxure Operator Terminal Expert and will have to be purchased as a separate license for all ST6/STM6 references, except for HMISTM6BOX reference which includes the license.

# Harmony ST6

High-resolution and cost-efficient basic HMI

## Communication


Harmony ST6 HMI panels communicate with PLCs via one or two integrated serial links, using the following communication protocols:

- Schneider Electric (Uni-TE, Modbus)
- Third-party: Mitsubishi Electric, Omron, Allen-Bradley, and Siemens

Harmony ST6 HMI Panels can also communicate on second Ethernet Network with SCADA/MES /ERP using OPC-UA protocol and with PC or Mobile devices for remote visualization using WebViewer function.


Depending on the model, they can be connected to Ethernet TCP/IP networks using one of the following:

- A Modbus TCP protocol
- A third-party protocol

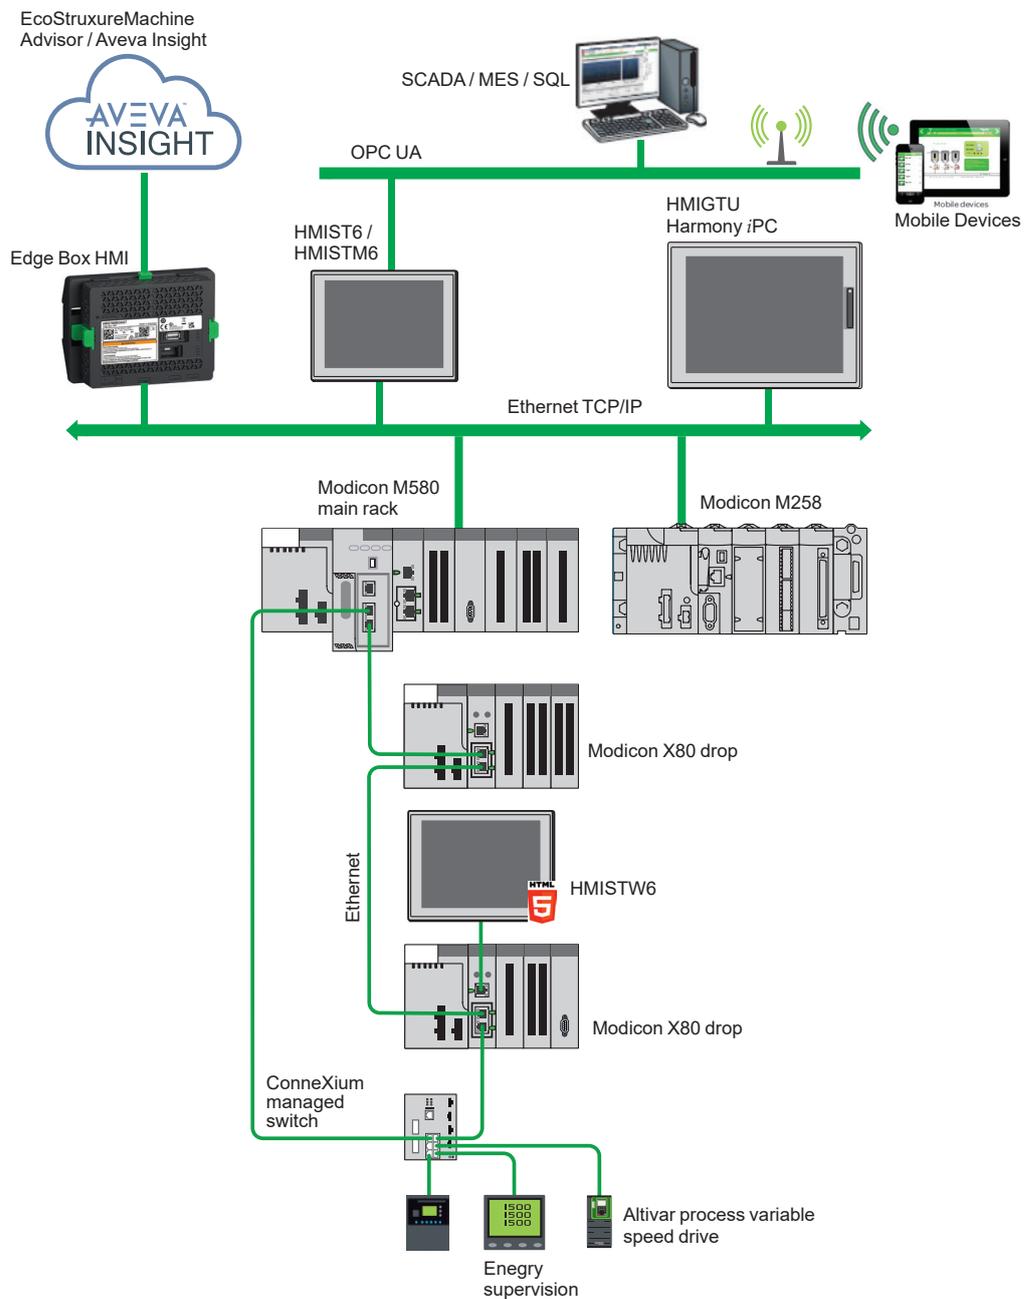

Typical plant architecture

### Communication (continued)

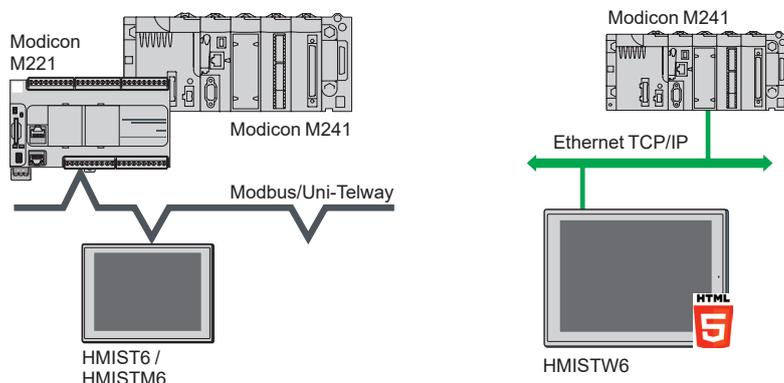


Simple machine architecture


### Panel operating modes

The following illustrations show the equipment that can be connected to Basic HMI panels according to their two operating modes.

#### Edit mode

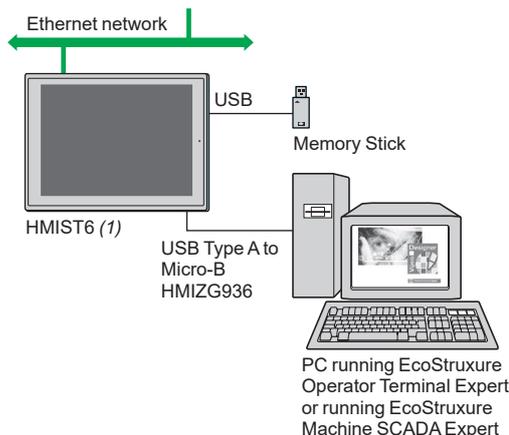

#### Operating mode

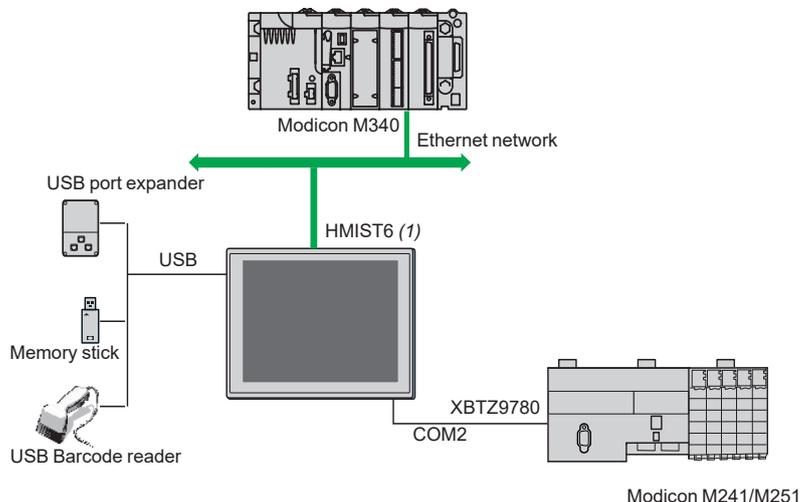


(1) HMIST6/HMISTM6 panels.


## Description

# Harmony ST6


High-resolution and cost-efficient basic HMI  
Basic/Web panels with 4" and 7" touchscreens

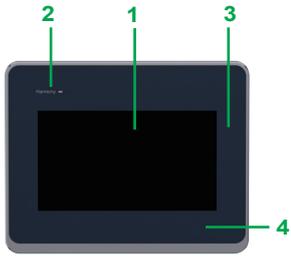


Front view

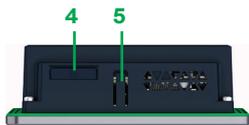


Top view of HMIST6200

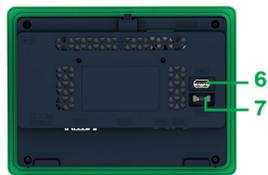


Rear view

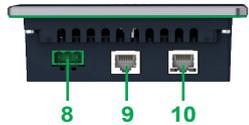

Underside view of HMIST6200

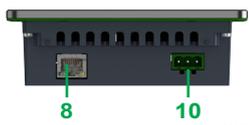

Underside view of HMISTW6200

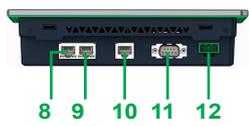

Underside view of HMIST6400



Underside view of HMISTW6400

### Description

#### Harmony HMIST6 200/400 Basic and HMISTW6 200/400 Web HMI panels

##### Front view

- 1 Single-touch resistive screen for displaying synoptic views
- 2 Multi-color status indicator (green, orange, and red) showing the panel's operating mode
- 3 Aluminum alloy front panel providing IP65F protection when mounted on panel or enclosure door
- 4 Without the Schneider Electric logo on the front module for the HMIST6200FW Basic HMI panels

##### Top view

- 5 Battery slot (1)
- 6 Hook to hold panel in position during installation

##### Rear view

- 7 USB (Type A) interface
- 8 USB (Micro-B) interface

#### Harmony HMIST6200 Basic and HMISTW6200 Web HMI panels

##### Underside view

- 9 Ethernet interface (ETH1)
- 10 Serial interface (RJ45, RS-232C/485) (COM1)
- 11 Power plug connector

#### Harmony HMIST6400 Basic and HMISTW6400 Web HMI panels


##### Underside view

- 8 Ethernet interface (ETH2)
- 9 Ethernet interface (ETH1)
- 10 Serial interface (RJ-45, RS-485) (COM2)
- 11 Serial interface (RS-232C) (COM1)
- 12 Power plug connector

(1) For HMIST6 200/400 only.

# Harmony ST6

High-resolution and cost-efficient basic HMI  
Basic/Web panels with 10", 12", and 15" touchscreens

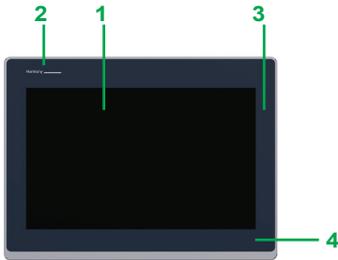


Front view



Top view



Underside view

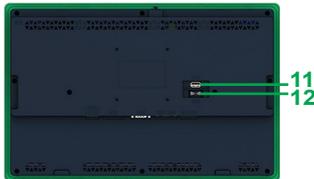

Rear view

## Description

Harmony HMIST6 500/600/700 Basic and HMISTW6 500/600/700 Web HMI panels

### Front view

- 1 Single-touch resistive screen for displaying synoptic views
- 2 Multi-color status indicator (green, orange, and red) showing the panel's operating mode
- 3 Aluminum alloy front panel providing IP65F protection when mounted on panel or enclosure door
- 4 Without the Schneider Electric logo on the front module for the HMIST6500FW Basic HMI panels

### Top view

- 5 Hook to hold panel in position during installation

### Underside view

- 6 Battery slot (1)
- 7 Ethernet interface (ETH2)
- 8 Ethernet interface (ETH1)
- 9 Serial interface (RJ-45, RS-485) (COM2) (1)
- 10 Serial interface (RS-232C) (COM1) (1)
- 11 Power plug connector

### Rear view

- 12 USB (Type A) interface
- 13 USB (Micro-B) interface

(1) For HMIST6 500/600/700 only.

# Harmony ST6

High-resolution and cost-efficient basic HMI Modular panels with 4" and 7" display modules and rear module, Gateway box and Edge Box HMI

## Description


The modular Harmony STM6 version has:

- Basic HMI Modular panels HMISTM6200 and HMISTM6400, a combination of display module 4" (HMISTM6200) or 7" (HMISTM6400) and a rear module (HMISTM6B)
- Basic HMI Gateway Box, rear module (HMISTM6BOX) mounted on DIN Rail adapter
- The Edge Box HMI (HMISTM6BOXIOT) is a Box without DIN rail

## Display module

### Front view

- 1 Multi-color status LED
- 2 Single-touch resistive screen for displaying synoptic views
- 3 Without the Schneider Electric logo on the front module for the HMISTM6 200FW/400FW Basic Modular HMI panels

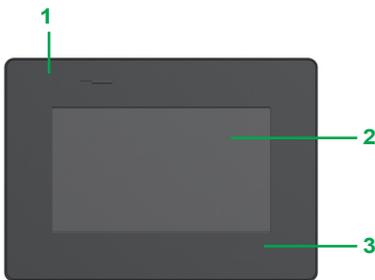


Front view of HMISTM62

## Rear module

### Front view


- 4 Status LED
- 5 Bumper
- 6 USB (Type A) interface
- 7 USB (micro-B) interface

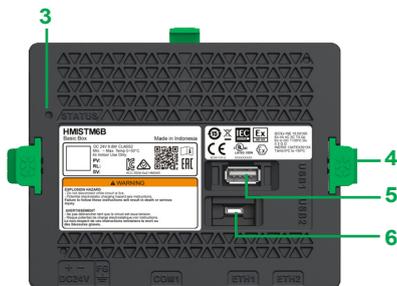

Front view of HMISTM6B

## Underside view

- 8 Power plug connector
- 9 Serial interface (COM1)
- 10 Ethernet interface (ETH1)
- 11 Ethernet interface (ETH2)

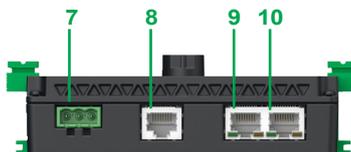

Underside view of HMISTM6B

## Modular panel: Display module + Rear module

- 12 Button to separate the rear module from display module



Side view of Modular panel

## HMISTM6 Gateway Box

- 13 DIN rail mount

## HMISTM6 Edge Box HMI

Same external design than HMISTM6 Gateway Box with same communication interfaces and same power supply.

- 12 DIN rail mount



HMISTM6BOX mounted on DIN rail

# Harmony ST6

High-resolution and cost-efficient basic HMI  
Basic/Web/Modular HMI panels

ST6\_65770\_CPMFS18002R



HMIST6400

ST6\_65770\_CPMFS18005R



HMIST6700

ST6\_65770\_CPMFS18002R



HMISTW6400

T6\_65770\_CPMFS18005R



HMISTW6700

STM6\_CP20077



HMISTM6200

STM6\_CP20080



HMISTM6400

STM6\_CP20081



HMISTM6BOX

Harmony ST6 Basic HMI panels								
Data entry method	Size	Resolution (pixels)	Colors	Device memory	Application memory	Number of ports	Reference	Weight kg/lb
Via touchscreen	4.3" W	480 x 272	16 million colors	512 MB	128 MB	2x USB 1x COM 1 1x Ethernet	<a href="#">HMIST6200</a> <a href="#">HMIST6200FW</a>	0.400/0.880
	7" W	800 x 480 WVGA	16 million colors	1 GB	128 MB	2x USB 1x COM 1 1x COM 2 2x Ethernet	<a href="#">HMIST6400</a>	0.800/1.760
	10.1" W	1,024 x 600 WSVGA	16 million colors	1 GB	128 MB	2x USB 1x COM 1 1x COM 2 2x Ethernet	<a href="#">HMIST6500</a> <a href="#">HMIST6500FW</a>	1.300/2.870
	12.1" W	1,280 x 800 WXGA	16 million colors	1 GB	128 MB	2x USB 1x COM 1 1x COM 2 2x Ethernet	<a href="#">HMIST6600</a> <a href="#">HMIST6600FW</a>	1.800/3.970
	15.6" W	1,366 x 768 FWXGA	16 million colors	1 GB	128 MB	2x USB 1x COM 1 1x COM 2 2x Ethernet	<a href="#">HMIST6700</a>	2.700/5.950

Harmony STW6 Web HMI panels								
Data entry method	Size	Resolution (pixels)	Colors	Device memory	User data memory	Number of ports	Reference	Weight kg/lb
Via touchscreen	4.3" W	480 x 272	16 million colors	512 MB	512 MB	2x USB 1x Ethernet	<a href="#">HMISTW6200</a>	0.400/0.880
	7" W	800 x 480 WVGA	16 million colors	512 MB	512 MB	2x USB 2x Ethernet	<a href="#">HMISTW6400</a>	0.800/1.760
	10.1" W	1,024 x 600 WSVGA	16 million colors	512 MB	512 MB	2x USB 2x Ethernet	<a href="#">HMISTW6500</a>	1.300/2.870
	12.1" W	1,280 x 800 WXGA	16 million colors	512 MB	512 MB	2x USB 2x Ethernet	<a href="#">HMISTW6600</a>	1.800/3.970
	15.6" W	1,366 x 768 FWXGA	16 million colors	512 MB	512 MB	2x USB 2x Ethernet	<a href="#">HMISTW6700</a>	2.700/5.950

Harmony STM6 Modular HMI panels								
Data entry method	Size	Resolution (pixels)	Colors	Device memory	Application memory	Number of ports	Reference	Weight kg/lb
Via touchscreen	4.3" W	480 x 272	16 million colors	1 GB	128 MB	2x USB 2x Ethernet 1x COM1	<a href="#">HMISTM6200</a> <a href="#">HMISTM6200FW</a>	0.490/1.080
	7" W	800 x 480 WVGA	16 million colors	1 GB	128 MB	2x USB 2x Ethernet 1x COM1	<a href="#">HMISTM6400</a> <a href="#">HMISTM6400FW</a>	0.760/1.675

Harmony Edge Box HMI						
Product type	Operating system	Device memory	Application memory	Number of ports	Reference	Weight kg/lb
Modular HMI box	Linux	1 GB	128 MB	2x USB 2x Ethernet 1x COM1	<a href="#">HMISTM6BOX</a>	0.456/1.005
Edge Box HMI	Linux	1 GB	128 MB	2x USB 2x Ethernet 1x COM1	<a href="#">HMISTM6BOXIOT</a>	0.456/1.005

Interfaces				
Description	Characteristics	Compatible with panels	Reference	Weight kg/lb
<b>RJ45 to D-Sub 25 pin conversion cable</b>	Connects a D-Sub 25-pin cable to this product (RJ45)	HMISTM6200/HMISTM6400	<a href="#">XBTZG939</a>	–
<b>9-pin-to-25-pin RS-232C conversion cable</b>	Connects a standard RS-232C cable (D-Sub 25-pin socket) to this product (D-sub 9 pin plug)	HMISTM6200/HMISTM6400	<a href="#">XBTZG919</a>	–
<b>COM Port conversion adapter</b>	Connects optional RS-422 communication items to serial interface (RS-232C)	HMISTM6200/HMISTM6400	<a href="#">XBTZGCOM1</a>	–
<b>RS-485 isolation unit</b>	Connects a host controller to this product with isolation	HMISTM6200/HMISTM6400	<a href="#">XBTZGI485</a>	–

Accessories				
Description	Characteristics	Compatible with panels	Reference	Weight kg/lb
<b>USB panel-mount extension cable</b>	Extension cable of 1 m/3.28 ft for connecting USB interface to front panel	–	<a href="#">HMIZSUSBB2</a>	–
<b>USB front cable</b>	Extension cable that attaches USB interface to front panel	–	<a href="#">XBTZGUSB</a>	–
<b>USB Type A clamp (1 port)</b>	Clamp to prevent disconnection of USB cable (USB Type A, 1 port), 5 clamps/set	–	<a href="#">HMIZGCLP1</a>	–

Separate parts				
Description	Characteristics	Compatible with panels	Reference	Weight kg/lb
<b>Screen protection sheet with UV protected</b>	Disposable, dirt-resistant and ultra-violet protection sheet (1 sheet/set)	HMIST6200/HMISTW6200/HMISTM6200	<a href="#">HMIZG60W</a>	–
		HMIST6400/HMISTW6400/HMISTM6400	<a href="#">HMIZG63W</a>	–
		HMIST6500/HMISTW6500	<a href="#">HMIZG65W1</a>	–
		HMIST6700/HMISTW6700	<a href="#">HMIZG67W</a>	–
	Disposable, dirt resistant sheet (5 sheets/set)	HMIST6600/HMISTW6600	<a href="#">HMIZD66W</a>	–
<b>Spring clip</b>	Fasteners to attach this product to the mounting surface	HMIST6200/HMISTW6200	<a href="#">XBTZ3002</a>	–

**Note:** The accessories and separate parts may be changed or discontinued without notice. Please check our website [www.se.com](http://www.se.com) for the latest information.



STM6\_CP20079



HMISTM6B

STM6\_CP20076




HMISTM64

ST6\_65770\_CPMFS18011A



HMIZSFIXTF1

ST6\_65770\_CPMFS18007A

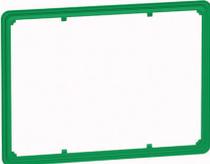

HMIZS53W1

STM6\_CP20074



HMIZM6DSA

STM6\_CP20078



HMIZM6RDP5

### Spare parts

Description	Characteristics	Compatible with panels	Reference	Weight kg/lb
Rear module	Rear module for Harmony STM6	HMISTM6200/HMISTM6400	<a href="#">HMISTM6B</a>	—
Display module	Display module for HMISTM6200, 4-inch wide type	HMISTM6400	<a href="#">HMISTM62</a>	—
Display module	Display module for HMISTM6400, 7-inch wide type	HMISTM6400	<a href="#">HMISTM64</a>	—
Display module fixing nut	Nut to install the display module (10 pieces/set)	HMISTM6200/HMISTM6400	<a href="#">ZB5AZ901</a>	—
Socket wrench	Socket wrench to tighten and loosen the display installation nut	HMISTM6200/HMISTM6400	<a href="#">ZB5AZ905</a>	—
Accessories kit	Anti-rotation Tee, USB Clamp Type A, USB Clamp mini-B (2) (1 piece/each)	HMISTM6200/HMISTM6400	<a href="#">HMIZM6KIT</a>	—
Installation fastener	Installation fastener	HMIST6200/HMISTW6200	<a href="#">HMIZSFIX2</a>	—
		HMIST6400/HMISTW6400	<a href="#">HMIZSFIXTF1 (1)</a>	—
		HMIST6500/HMISTW6500		—
		HMIST6600/HMISTW6600		—
		HMIST6700/HMISTW6700		—
Installation gasket	Provides dust and moisture resistance when this product is installed in a solid panel	HMIST6200/HMISTW6200	<a href="#">HMIZS51W1</a>	—
		HMISTM6200	<a href="#">HMIZS51W2</a>	—
		HMIST6400/HMISTW6400	<a href="#">HMIZS53W1</a>	—
		HMISTM6400	<a href="#">HMIZS53W2</a>	—
		HMIST6500/HMISTW6500	<a href="#">HMIZS55W1</a>	—
		HMIST6600/HMISTW6600	<a href="#">HMIZS56W1</a>	—
		HMIST6700/HMISTW6700	<a href="#">HMIZS57W1</a>	—
DC power supply connector	Connector to connect DC power supply cables	All panels	<a href="#">XBTZGPWS1</a>	—
Replacement battery	Primary battery for time data backup	HMIST6 panels	<a href="#">HMIZSBA1</a>	—

### Separate parts

Description	Characteristics	Compatible with panels	Reference	Weight kg/lb
Rear module installation adapter	Adapter for installing the rear module on a DIN rail	HMISTM6200/HMISTM6400	<a href="#">HMIZM6DSA</a>	—
Spacer	Plate for adjusting installation panel thickness for the 4-inch wide display module	HMISTM6200	<a href="#">HMIZM6MP2</a>	—
Spacer	Plate for adjusting installation panel thickness for the 7-inch wide display module	HMISTM6400	<a href="#">HMIZM6MP4</a>	—
Display module/ Rear module separation cable (3 m/9.84 ft)	cable for use when installing the rear module and display module apart from the other	HMISTM6200/HMISTM6400	<a href="#">HMIZM6RDP3</a>	—
Display module/ Rear module separation cable (5 m/16.40 ft)	cable for use when installing the rear module and display module apart from the other	HMISTM6200/HMISTM6400	<a href="#">HMIZM6RDP5</a>	—
Display module/ rear module separation cable (10 m/32.80 ft)	cable for use when installing the rear module and display module apart from the other	HMISTM6200/HMISTM6400	<a href="#">HMIZM6RDP10</a>	—

(1) 2 pieces/set for HMI6400/HMI6500/HMI6600 and 3 pieces/set for HMIST6700.


(2) USB Clamp mini-B can be used for optional USB micro-B cables.

**Note:** The spare and separate parts may be changed or discontinued without notice. Please check our website [www.se.com](http://www.se.com) for the latest information.


# Harmony ST6

High-resolution and cost-efficient basic HMI  
Connection system

**HMIST6 panels and Schneider Electric products**

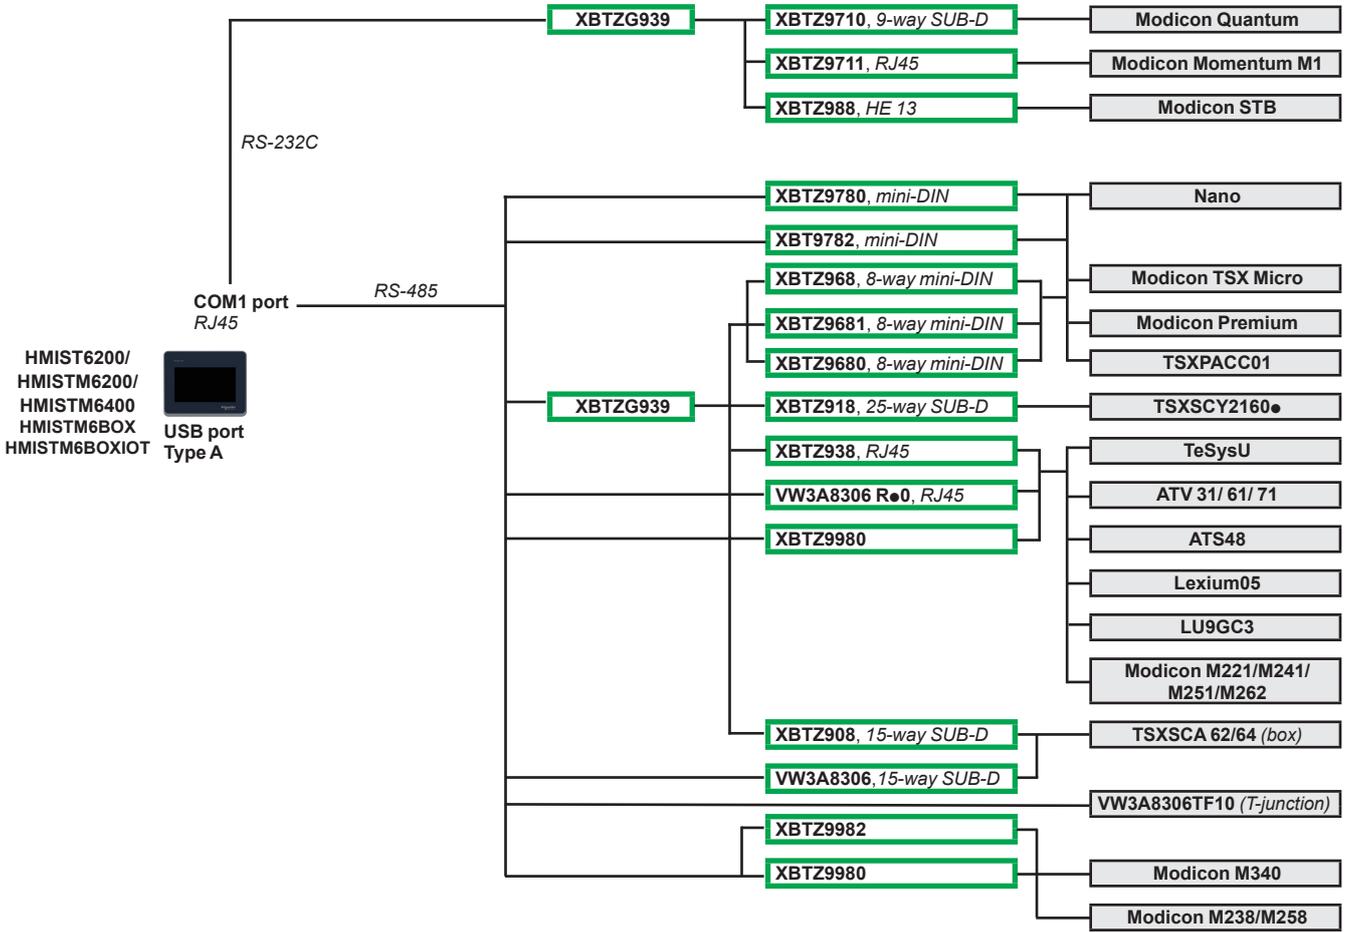

## HMIST6 panels and Schneider Electric products

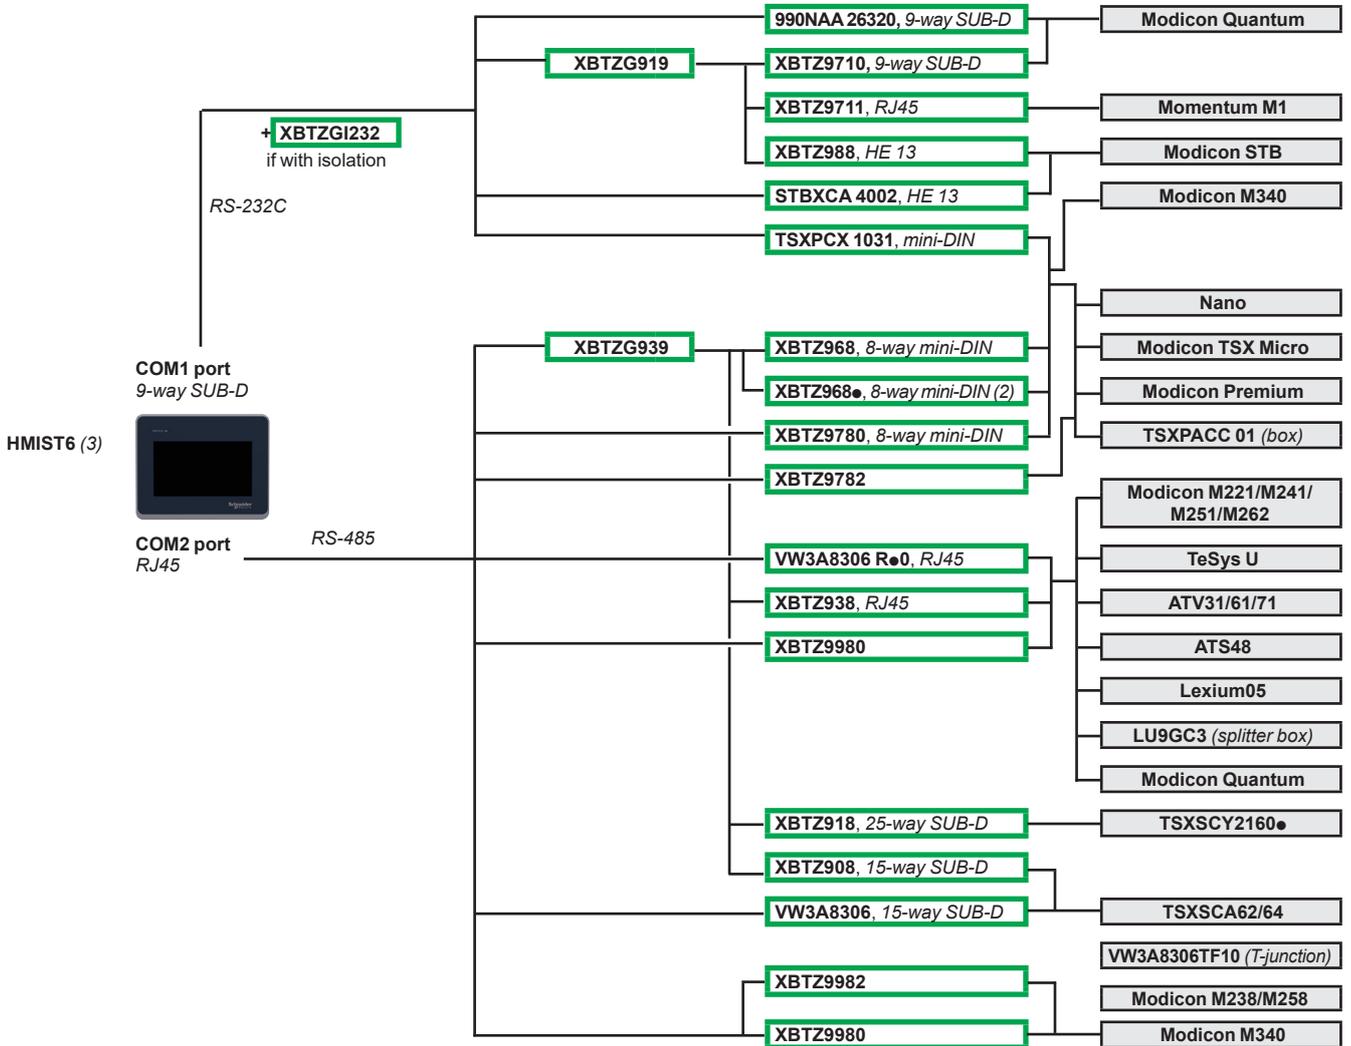

(1) RS-485 not available for HMIST6 (COM1).

(2) ● defines the length:

- 0: 2.5 m/8.2 ft (elbowed connector)

- 1: 5 m/16.4 ft


- 6: 16 m/52.5 ft

- 7: 20 m/65.6 ft


- 8: 25 m/82 ft

(3) Except HMIST6200.

### HMIST6 panels and third-party PLCs

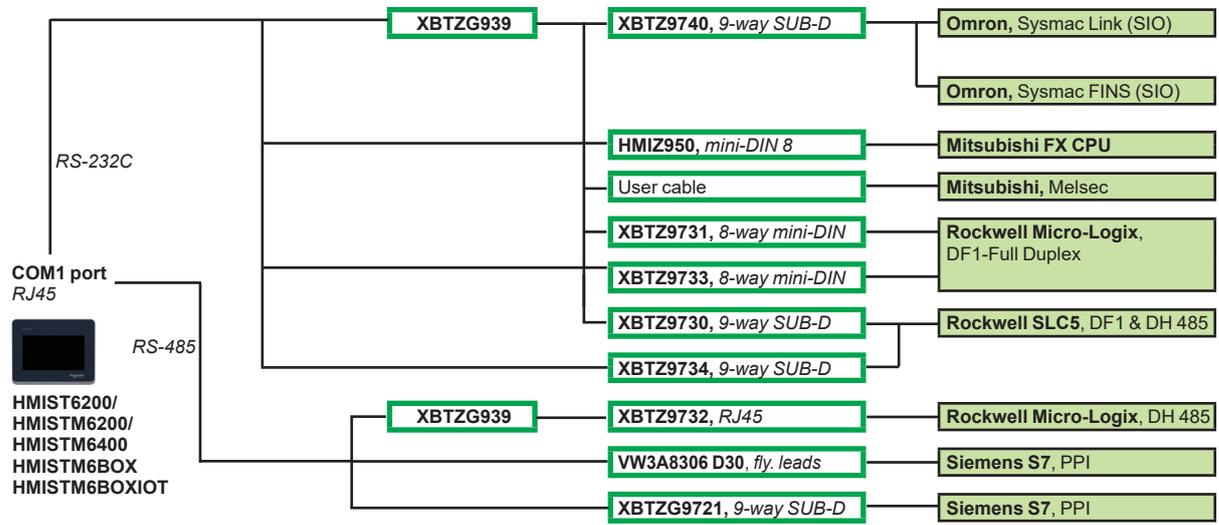


### Application transfer from HMIST6 panels to PC

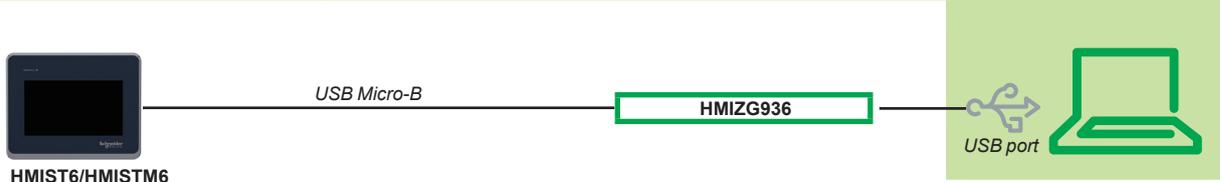

# Harmony ST6

High-resolution and cost-efficient basic HMI Connection system

## HMIST6 panels and third-party PLCs

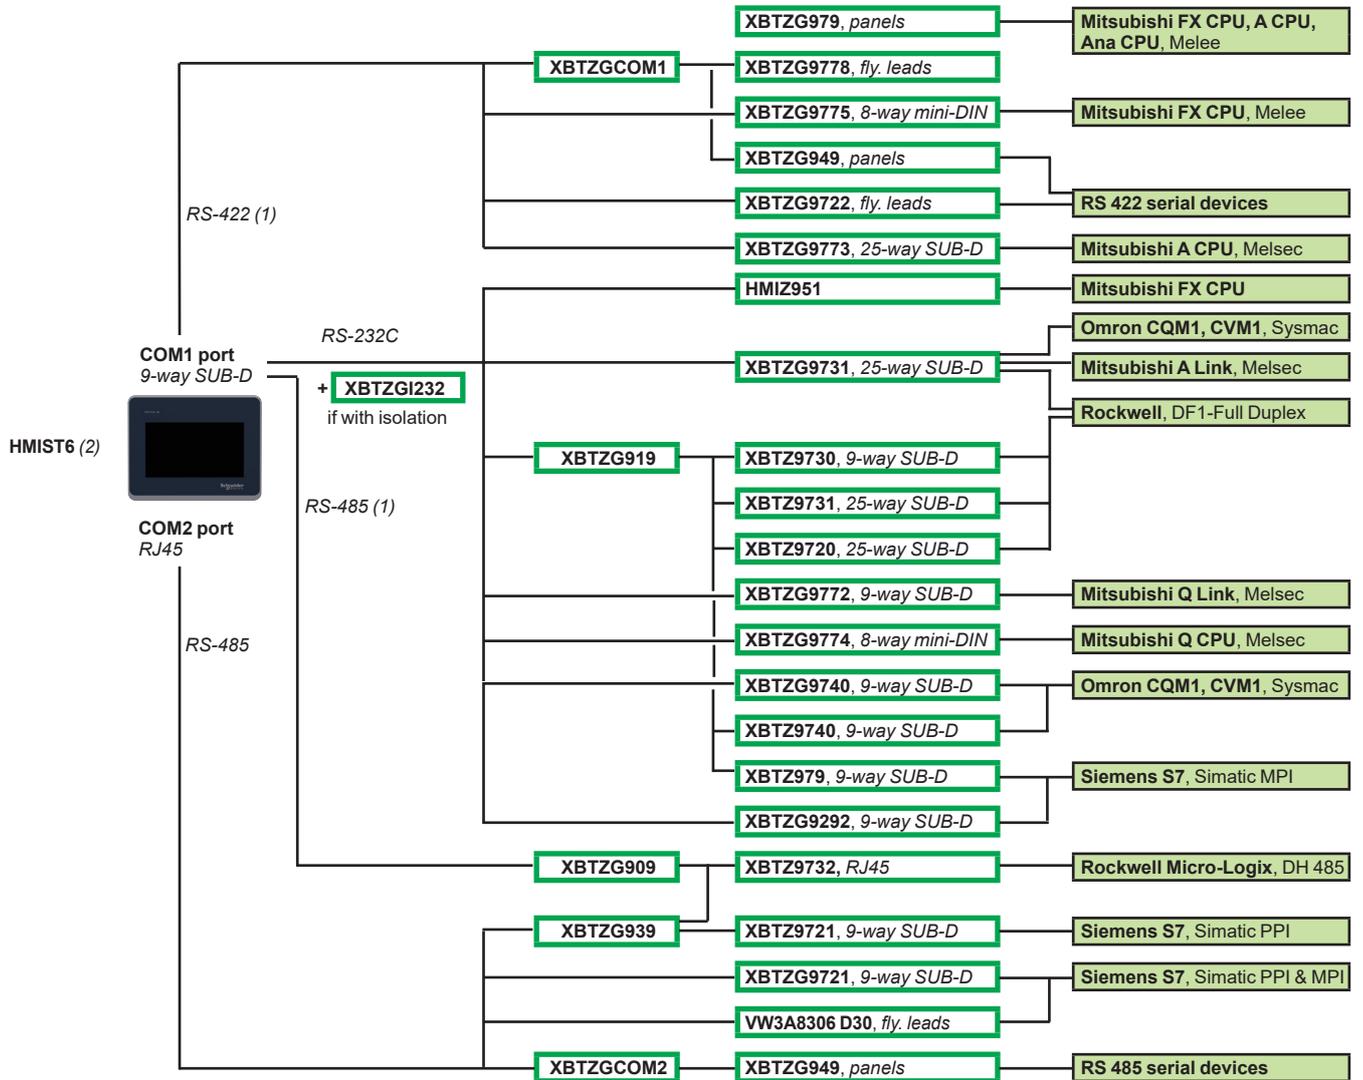

(1) RS-422 and RS-425 not available on HMIST6 (COM1).  
 (2) Except HMIST6200.

<b>H</b>		<b>HMIZSFIXTF1</b>	21
HMIST6200	19 20 21	HMIZSUSBB2	20
		<b>X</b>	
HMIST6200FW	19	XBTZ3002	20
HMIST6400	19 20 21	XBTZG919	20
		XBTZG939	20
HMIST6500	19 20 21	XBTZGCOM1	20
		XBTZGI485	20
HMIST6500FW	19	XBTZGPWS1	21
HMIST6600	19 20 21	XBTZGUSB	20
		<b>Z</b>	
HMIST6600FW	19	ZB5AZ901	21
HMIST6700	19 20 21	ZB5AZ905	21
HMISTM62	21		
HMISTM6200	19 20 21		
HMISTM6200FW	19		
HMISTM64	21		
HMISTM6400	19 20 21		
HMISTM6400FW	19		
HMISTM6B	21		
HMISTM6BOX	19		
HMISTM6BOXIOT	19		
HMISTW6200	19 20 21		
HMISTW6400	19 20 21		
HMISTW6500	19 20 21		
HMISTW6600	19 20 21		
HMISTW6700	19 20 21		
HMIZD66W	20		
HMIZG60W	20		
HMIZG63W	20		
HMIZG65W1	20		
HMIZG67W	20		
HMIZGCLP1	20		
HMIZM6DSA	21		
HMIZM6KIT	21		
HMIZM6MP2	21		
HMIZM6MP4	21		
HMIZM6RDP10	21		
HMIZM6RDP3	21		
HMIZM6RDP5	21		
HMIZS51W1	21		
HMIZS51W2	21		
HMIZS53W1	21		
HMIZS53W2	21		
HMIZS55W1	21		
HMIZS56W1	21		
HMIZS57W1	21		
HMIZSBA1	21		
HMIZSFIX2	21		

# mySchneider, your personalized digital experience

Access an all-in-one customized online experience and benefit from tailored business services, resources, and tools to efficiently support your business operations.

- **Efficiency:** In just a few clicks, find all the information and support you need to get the job done.
- **Simplicity:** Use a single login to access all business services, in one place, available 24/7. You no longer need to log in to multiple platforms.
- **Personalization:** Benefit from content, tools, and business services tailored to your activity, and customize your landing page based on your preferences.

## Watch the How-to Videos



### Order management

- > [Select Products and Add to Cart](#)
- > [Check for Products' Price and Availability](#)
- > [Order Products with Generic Commercial References](#)




### Product information

- > [Find a Product Data Sheet and Related Documents](#)
- > [Select Products and Add to Cart](#)
- > [Stay Up to Date on the Status of My Products](#)



### Support

- > [Get Quicker Answers Thanks to Online Support](#)

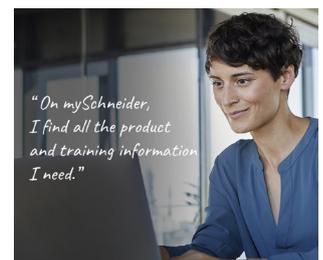

### Training

- > [Access Trainings Dedicated to My Activity](#)

[Create your account](#)

Life Is 

**Schneider**  
Electric

# Legal information

The information provided in this Catalog contains description of Schneider Electric products, solutions and services ("Offer") with technical specifications and technical characteristics of the performance of the corresponding Offer.

The content of this document is subject to revision at any time without notice due to continued progress in methodology, design and manufacturing.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any type of damages arising out of or in connection with (i) informational content of this Catalog not conforming with or exceeding the technical specifications, or (ii) any error contained in this Catalog, or (iii) any use, decision, act or omission made or taken on basis of or in reliance on any information contained or referred to in this Catalog.

SCHNEIDER ELECTRIC MAKES NO WARRANTY OR REPRESENTATION OF ANY KIND, WHETHER EXPRESS OR IMPLIED, AS TO WHETHER THIS CATALOG OR ANY INFORMATION CONTAINED THEREIN SUCH AS PRODUCTS AND SERVICES WILL MEET REQUIREMENTS, EXPECTATIONS OR PURPOSE OF ANY PERSON MAKING USE THEREOF.

Schneider Electric brand and any trademarks of Schneider Electric and its subsidiaries referred to in this Catalog are property of Schneider Electric or its subsidiaries. All other brands are trademarks of their respective owners.

This Catalog and its content are protected under applicable copyright laws and provided for informative use only. No part of this Catalog may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Copyright, intellectual, and all other proprietary rights in the content of this Catalog (including but not limited to software, audio, video, text, and photographs) rests with Schneider Electric or its licensors. All rights in such content not expressly granted herein are reserved. No rights of any kind are licensed or assigned or shall otherwise pass to persons accessing this information.

Life Is On



Learn more about our products at [www.se.com/hmi](http://www.se.com/hmi)

Design: Schneider Electric  
Photos: Schneider Electric

**Schneider Electric Industries SAS**

Head Office  
35, rue Joseph Monier - CS 30323  
F-92500 Rueil-Malmaison Cedex  
France

DIA5ED2181202EN  
August 2024 - V6.1