

## 2 POLE - 3 WIRE GROUNDING PLUGS



### Installation Instructions

#### WIRING INSTRUCTIONS:

- **NOTICE:** For installation by qualified electrician in accordance with national and local electrical codes, and the included instructions.
- **CAUTION: RISK OF ELECTRIC SHOCK. Disconnect power before installing.**
- Select proper conductor size in accordance with the National Electrical Code® or the Canadian Electrical Code.

CORD TYPE	CORD DIAMETER
18/3 & 16/3 SEOOW	.365" - .390" (9.27 – 9.91 mm)
18/3 - 12/3 SJEOOW	.310" - .430" (7.87 – 10.92 mm)

- Slide cover onto cord.
- Strip cord jacket and conductors as shown.

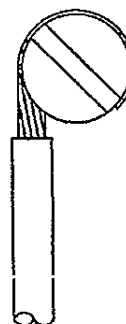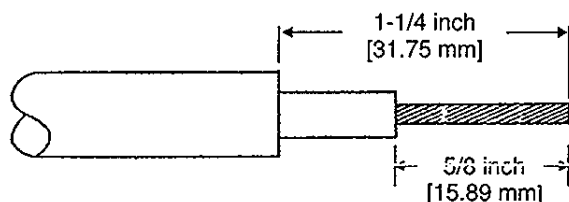

DO NOT TIN CONDUCTORS.

- Loosen terminal screws. Insert conductors fully into proper terminals and twist all wires firmly together as shown.

TERMINAL	CONDUCTOR
Green Hex Head Screw	Equipment Grounding Conductor (Green or Green/Yellow)
White Screw	Grounded Circuit Conductor, Neutral (White or Gray)
Brass / Black Screw	Ungrounded Circuit Conductor, Line (NOT White, NOT Green)

- TAKE CAUTION THAT THERE ARE NO STRAY WIRE STRANDS.
- Tighten ALL screws to 12 Lb•ins (1.36N•m).
- Replace cover and tighten clamp screws to 5 – 7 Lb•ins (0.56 – 0.79N•m).