




## INSTRUCTION SHEET

# Assembling RACO Crushed Corners Covers


### STEP 1

Remove and retain the mounting screws included with the device. These screws will be used to secure the device to the cover. Retain nuts if they are provided.

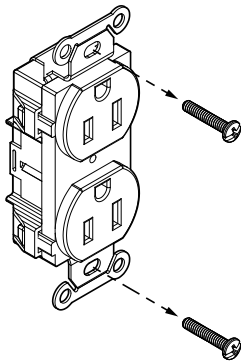

### STEP 2

Prepare the device for mounting by removing the ears from the mounting strap or yoke by bending back and forth a few times at the perforation. For most receptacles also remove the ends of the strap at the perforation.

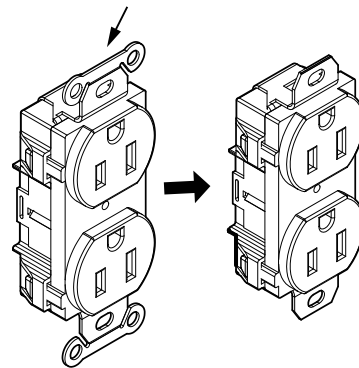


### STEP 3

Wire the device or devices per manufacturer instructions.

### STEP 4

Secure the device to the cover using the device mounting screws. On some devices the nuts provided with the cover are required to secure the device to the cover.

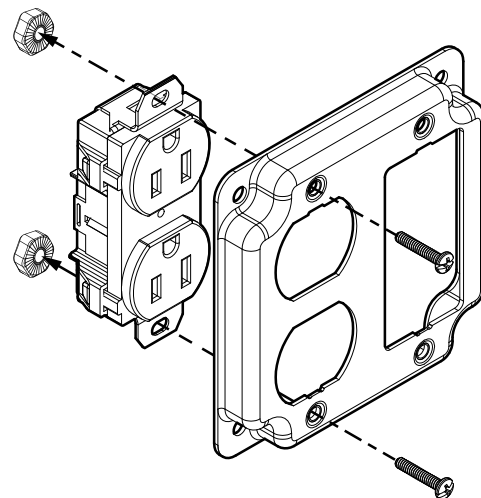

Note: If you do not see the perforation it might be necessary to snip the pieces off with a cutting tool. Avoid removing too much strap to maintain the integrity of the device mounting holes.