

# Meter Offset

## Features


- High tensile and impact strength
- An offset is needed to move the path of the conduit away from a wall into the holes of an electrical meter box

## Applications

- Use to connect a conduit to a meter box

## Standard Material

- PVC

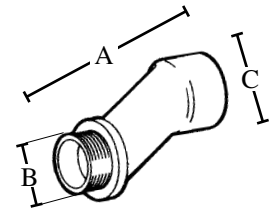

Catalog Number	UPC	Size	Ship Case	Weight/ Case	A	Inches B	C
<b>1094</b>	23116	<b>1-1/4"</b>	15	3	3.50	1.625	2
<b>1096</b>	23117	<b>2"</b>	8	2	3.50	2.3125	2.1875