

# Modicon 140 CPU 534 14 CPU Module

Publication # 043513404



## Specifications

User Logic/Reference Capacity	User Logic	Discrete	Register	Extended Register	IEC Application Memory
	64 k words	64 k	57 k *	96 k	2.5 M
* 57,766 4XX registers max Only if 0XXX = 16 and 1XXX = 16 and 3XXX = 16					
<b>Reference Capacity</b>					
Discrete	64 k – any mix				
<b>Local I/O (Main Backplane)</b>					
Maximum I/O Words	64 In and 64 Out *				
Maximum Number of I/O Racks	1				
<b>Remote I/O</b>					
Maximum I/O Words per Drop	64 In and 64 Out *				
Maximum Number of Remote Drops	31				
<b>Distributed I/O</b>					
Maximum Number of Networks per System	3 **				
Maximum Words per Network (For every DI/O drop, there is a minimum of two words input of overhead.)	500 In and 500 Out				
Maximum Words per Node	30 In and 32 Out				
Maximum Number of Option Module Interfaces	6				
Watchdog Timer	250 ms (S/W adjustable)				
Logic Solve Time	TBD				
Battery	3 V Lithium				
Service Life	1200 mAh				
Shelf Life	10 years with 0.5% loss of capacity per year				
<b>Battery Load Current @ Power-off</b>					
Typical	14 µA				
Maximum	420 µA				
<b>Communication</b>					
Modbus (RS-232)	2 serial ports (9-pin D-shell)				
Modbus Plus (RS-485)	1 network port (9-pin D-shell)				

\* This information can be a mix of Discrete or Register I/O. For each word of register I/O configured, one word of I/O words must be subtracted from the total available. The same holds true for each block of 8 bits or 16 bits of Discrete I/O configured—one word of Register I/O must be subtracted from the total available.

\*\* Requires the use of two 140 NQM 21x 00 Option Modules.



## Specifications (cont'd)


General		
Diagnostics	<b>Power Up</b>	<b>Runtime</b>
	RAM	RAM
	RAM Address	RAM Address
	Executive Checksum	Executive Checksum
	User Logic Check Processor	User Logic Check
Bus Current Required	1.8 A	
TOD Clock	+/- 8.0 seconds/day 0 ... 60°C	
Operating Temperature	0 ... 45°C	

## Front Panel Switches

One three-position slide switch and one three-position key switch are located on the front of the CPU.

### Slide Switch

The slide switch is used to select the comm parameter settings for the Modbus (RS-232) ports. Three options are available:

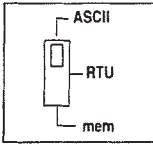

- Setting the slide switch to the top position assigns ASCII functionality to the port; the following comm parameters are set and cannot be changed:

ASCII Comm Port Parameters	
Baud	2,400
Parity	Even
Data Bits	7
Stop Bits	1
Device Address	Rear panel rotary switch setting

- Setting the slide switch to the middle position assigns remote terminal unit (RTU) functionality to the port; the following comm parameters are set and cannot be changed:


RTU Comm Port Parameters	
Baud	9,600
Parity	Even
Data Bits	8
Stop Bits	1
Device Address	Rear panel rotary switch setting

- Setting the slide switch to the bottom position gives you the ability to assign comm parameters to the port in software; the following parameters are valid:

Baud	19,200	1,200
	9,600	600
	7,200	300
	4,800	150
	3,600	134.5
	2,400	110
	2,000	75
	1,800	50
Data Bits	7 / 8	
Stop Bits	1 / 2	
Parity	Enable/Disable Odd/Even	
Device Address	1 ... 247	

### Key Switch


The key switch is used to protect memory from programming changes while the controller is in operation.

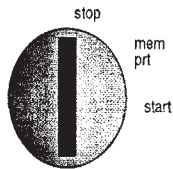

Key switch Position	Controller Status	Memory Protected From Programmer Changes	Will Accept Programmer Stop or Start	Key switch Transition
Stop	Controller is stopped and disables Programmer changes	Y	N	<b>From Start or Memory Protect:</b> Stops controller, if running, and disables Programmer changes
Memory Protect	Controller may be either stopped or running and Programmer changes are disabled	Y	N	<b>From Stop or Start:</b> Prevents Programmer changes, controller run status is not changed
Start	Controller may be either stopped or running, Programmer may make changes and start/stop the controller	N	Y	<b>From Stop:</b> Enables Programmer changes, starts controller. <b>From Memory Protect:</b> Enables programmer changes, starts controller if stopped

## Modbus Connector Pinouts

The Quantum 140 CPU 534 14 is equipped with two nine-pin RS-232C connector that support Modicon's proprietary Modbus communication protocol. The following is the Modbus port pinout connections for nine-pin and 25-pin connections.

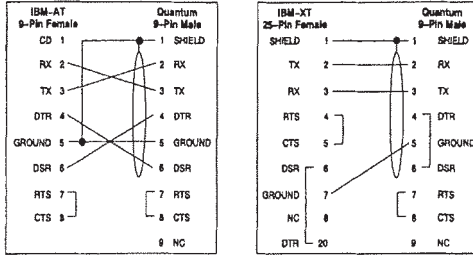


TX: Transmitted Data    DTR: Data Terminal Ready  
 RX: Received Data      CTS: Clear to Send  
 RTS: Request to Send    N/C: No Connection  
 DSR: Data Set Ready     CD: Carrier Detect

**Note:** Although the Modbus ports electrically support existing Modbus cables, it is recommended that a Modbus programming cable (Part # 990 NAA 263 20) be used. This cable has been designed to fit under the door of a Quantum CPU or NOM module.

## Rear Panel Switches

Two rotary switches (refer to the illustration and table below) are located on the rear panel of the CPU. They are used for setting Modbus Plus node and Modbus port addresses.


 **Note:** The highest address that may be set with these switches is 64.


SW1 (the top switch) sets the upper digit (tens) of the address;

SW2 (the bottom switch) sets the lower digit (ones) of the address.

The illustration below shows the correct setting for an example address of 11.

SW1 and SW2 Address Settings		
Node Address	SW1	SW2
1 ... 9	0	1 ... 9
10 ... 19	1	0 ... 9
20 ... 29	2	0 ... 9
30 ... 39	3	0 ... 9
40 ... 49	4	0 ... 9
50 ... 59	5	0 ... 9
60 ... 64	6	0 ... 4

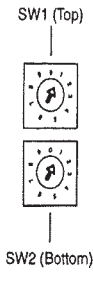

 **Note:** If "0" or an address greater than 64 is selected, the Modbus + LED will be "on" steady, to indicate the selection of an invalid address.

## Option Module Interface Support

The 140 CPU 534 14 supports up to six network modules (i.e., Modbus Plus, Ethernet and Multi-Axis Motion option modules) using the option module interface technique. However, only two Modbus Plus modules can have full functionality, including Quantum PIO support.

The following tables list the Quantum networking modules and describe the type of services provided by Modbus and Modbus Plus.

Summary of Quantum Communications and Networking Modules

Model Number	Description	Module Interface Technique	Loadable Required	Backplane Support			Bus Power mA
				Local	RIO	DIO	
140CRP93100	Remote I/O Head Interface, single cable	Direct CPU Driver	N	Y	N	N	780
140CRP93200	Remote I/O Head Interface, dual cable	Direct CPU Driver	N	Y	N	N	780
140CHS21000	Hot Standby Processor Kit	Direct CPU Driver	Y	Y	N	N	700
140NOA61110	Interbus Master	Direct CPU Driver	Y	Y	N	N	700
140NOM21100	Modbus Plus Options, single cable	Option Module	N	Y	N	N	780
140NOM21200	Modbus Plus Option, dual cable	Option Module	N	Y	N	N	780
140NOM25200	Modbus Plus Option, single channel fiber	Option Module	N	Y	N	N	900
140NOE21100	Ethernet TCP/IP Twisted Pair	Option Module	N	Y	N	N	1000
140NOE25100	Ethernet TCP/IP Fiber Optic	Option Module	N	Y	N	N	1000
140NOE31100	Ethernet SY/MAX Twisted Pair	Option Module	N	Y	N	N	1000
140NOE35100	Ethernet SY/MAX Fiber Optic	Option Module	N	Y	N	N	1000
140NOE5100 <sup>1</sup>	Ethernet MMS Twisted Pair	Option Module	N	Y	N	N	1000
140NOE55100 <sup>1</sup>	Ethernet MMS Fiber Optic	Option Module	N	Y	N	N	1000
140MMS42500	Multi-Axis Motion Controller w/SERCOS	Option Module	N	Y	N	N	2500
140NOL91100	LonWorks Interface, twisted pair FTT10	I/O Map (16/16)	Y	Y	Y	N	950
140NOL91110	LonWorks Interface, twisted pair TPT/XF-78	I/O Map (16/16)	Y	Y	Y	N	950
140NOL91120	LonWorks Interface, twisted pair TPT/XF-1250	I/O Map (16/16)	Y	Y	Y	N	950

1. The software for this module is a ModConnect product.

Quantum Modbus and Modbus Plus Services

Type	Service Description	Native CPU Ports		NOM 1-2 Ports		NOM 3-6 Ports <sup>1</sup>	
		Mod- bus	Mod- bus Plus	Mod- bus	Mod- bus Plus	Mod- bus	Mod- bus Plus
Modbus Services	Default Modbus Port Parameters	Y	-	Y	-	Y	-
	Configurable Modbus Port Parameters	Y	-	Y	-	Y <sup>5</sup>	-
	Modbus to Modbus Plus Bridging	Y <sup>2</sup>	-	Y <sup>3</sup>	-	Y <sup>3</sup>	-
	Local CPU Programming	Y <sup>4</sup>	-	Y <sup>4</sup>	-	N	-
	Remote CPU Programming over Modbus Plus	Y <sup>4</sup>	-	Y <sup>4</sup>	-	Y <sup>2</sup>	-
	Modbus access to local CPU	Y	-	Y	-	N	-
	Modbus access to remote CPU over Modbus Plus	Y	-	Y	-	Y	-
	Modbus Network Slave Support	Y	-	N	-	N	-
	Modbus Master support with XMIT Loadable	Y	-	N	-	N	-
Executive Firmware Loading Support	Y	-	N	-	N	-	
Modbus Plus services	MSTR read/write register messaging <sup>6</sup>	-	Y	-	Y	-	Y
	MSTR read/write Global Data messaging	-	Y	-	Y	-	Y
	MSTR get/clear local/remote statistics	-	Y	-	Y	-	Y
	Config Extension Global Data Support	-	Y	-	Y	-	N
	Config Extension Peer Cop Support	-	Y	-	Y	-	N
	Distributed I/O Support	-	Y	-	Y	-	N
	CPU Programming	-	Y <sup>4</sup>	-	Y <sup>4</sup>	-	Y <sup>4</sup>
Executive Firmware Loading Support	-	Y	-	N	-	N	

1. Only supported on the 140CPU42402, 140CPU43412 and 140CPU53414 Quantum Controllers.
2. The native CPU Modbus port can be disabled from bridge mode operation with the native Modbus Plus Port.
3. Modbus ports on NOMs are always in bridge mode with their associated Modbus Plus port.
4. Only one programmer connection can be logged in at a time to any CPU, and only one program monitor can be attached at a time to any CPU.
5. Modbus port parameters on NOMs 3-6 are defined by Modbus Port 3 in Concept and Modsoft when the comm parameter selector switch is in mem.
6. Up to 4 MSTR read/write register instructions can be serviced per CPU scan per Modbus Plus port.

For complete information concerning this and other modules, please obtain a copy of the *Quantum Automation Series Hardware Reference Guide* (840 USE 100 00) from your distributor or local sales office.

