

## Installation Instructions

Original Instructions



**Allen-Bradley**

by ROCKWELL AUTOMATION



# GuardShield Safety Light Curtain EtherNet/IP Network Interface

Catalog Number 450L-ENETR

Topic	Page
Product Overview and Dimensions	1
Install the Network Interface	1
Reset to Factory Default and Protection Mode	2
Status Indicators	3
Specifications	3




**ATTENTION:** You must familiarize yourself with installation and wiring instructions and requirements of all applicable codes, laws, and standards. In accordance with applicable codes of practice, suitably trained personnel are required to install, adjust, put into service, use, assemble, disassemble, and/or maintain this equipment. If this equipment is used in a manner that is not specified by the manufacturer, the protection that is provided by the equipment can be impaired.

Module is designed to meet IEC 61496.


## Product Overview and Dimensions

### 450L-ENETR Network Interface

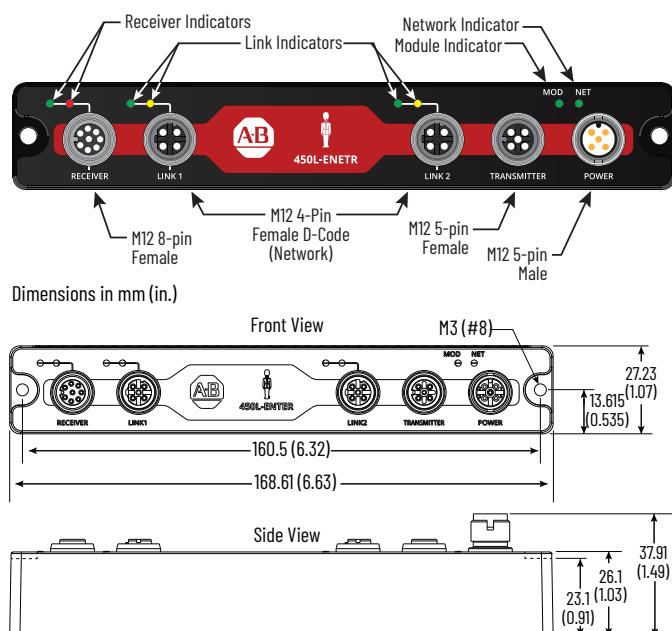


### 450L-APR-EN-8 Plug-in Module

**IMPORTANT** The plug-in module is purchased separately.

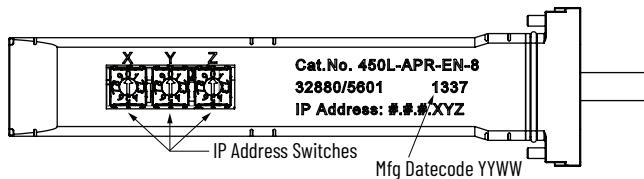

Dimensions in mm (in.)

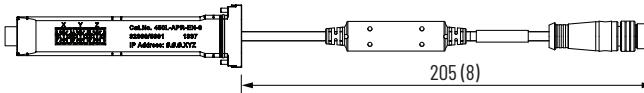

## Install the Network Interface

This section contains installation-related information.

### Assign IP Address

The 450L-ENETR network interface must be assigned a fixed (static) IP address to maintain continued communication with the network. The IP address is set on the 450L-APR-EN-8 plug-in module.

Value	Description
000	Clear explicit protected mode
001...254	Private address (#.#.XYZ)
888	Factory reset
900	Set explicit protected mode <sup>(1)</sup>
999	DHCP
All others	Do not use

<sup>(1)</sup> When explicit protection mode is set, explicit messages that affect the operation of the device are blocked. Examples of blocked messages are changes to the IP address, reset of the module, and update of the firmware. Explicit messages can still fetch diagnostic information.

There are four ways of assigning a fixed IP address:

- Use the XYZ rotary switches to set a 'Private' IP address.
- Use the Rockwell Automation BootP/DHCP tool, version 2.3 or later, which ships with Studio 5000® software (RSLogix 5000® software).
- Use RSLinx® software.
- Have your network administrator configure the ENETR network interface via the network DHCP server.

If the 450L-ENETR network interface is replaced, use the BOOTP/DHCP tool to assign the IP address to the MAC ID of the new network interface.

Perform the steps in [Reset to Factory Default and Protection Mode on page 2](#) before you change the IP address from a private address to a non-private address or vice versa.

## Reset to Factory Default and Protection Mode

At any time, the 450L-ENETR network interface can be set to the factory default or the protection mode can be set/cleared by following these steps:

1. Turn off power to the 450L-ENETR network interface.
2. Remove the 450L-APR-EN-8 plug-in module from the receiver stick.
3. Set the XYZ rotary switches on the 450L-APR-EN-8 plug-in module:
  - 888 to reset to factory default
  - 900 to set explicit protection mode
  - 000 to clear explicit protection mode
4. Insert the 450L-APR-EN-8 plug-in module into the receiver stick.
5. Apply 24V DC to the 450L-ENETR network interface.
6. Wait at least 5 seconds. After 5 seconds, the MOD indicator blinks red. All other indicators are OFF.
7. Remove power from the 450L-ENETR network interface.
8. Remove the 450L-APR-EN-8 plug-in module from the receiver stick.
9. Assign the new IP address by setting the XYZ rotary switches.
10. Insert the 450L-APR-EN-8 plug-in module into the receiver stick.
11. Apply 24V to the 450L-ENETR network interface.

## Wire the Module



**WARNING:** Disconnect power to the system before you attempt installation or device wiring.



**ATTENTION:**

- Calculate the maximum current in each power and common wire.
- Observe all electrical codes that dictate the maximum current allowable for each wire size.
- Current above the maximum ratings can cause wiring to overheat, which can cause damage.

- For the receiver cable, the maximum cable length is 2 m (6.6 ft).
- Do not run signal or communications wiring and power wiring in the same conduit. Route wires with different signal characteristics by separate paths.
- Separate wiring by signal type. Bundle wiring with similar electrical characteristics together.
- Label wiring to all devices in the system. Use tape, shrink-tubing, or other means to label wires. Also use colored insulation to identify wires based on signal characteristics. For example, you can use blue for DC wiring and red for AC wiring.
- Use the M12 protective cap (two provided) to maintain IP65 seal and help protect unused ports.

**IMPORTANT** Fault exclusions for conductors and wiring must follow the requirements of EN ISO 13849-2 Table D.3 and D.4. A fault exclusion can reduce the overall safety rating of the related safety function to a maximum of PLd per EN ISO 13849-1.

## Pinouts

**Table 1 - Receiver (Female)**

	Pin	Description
	1	Comm Rx
	2	+24V DC
	3	Functional Earth, FE
	4	Comm Tx
	5	14V from light curtain
	6	NC
	7	OV (GND)
	8	Safety interrupt

**Table 2 - Transmitter (Female)**

	Pin	Description
	1	+24V DC
	2	NC
	3	OV (GND)
	4	NC
	5	Functional Earth, FE

**Table 3 - Link (Female)**

	Pin	Description
	1	Tx Data+
	2	Rx Data+
	3	Tx-
	4	Rx-

**Table 4 - Power Connector (Male)**

	Pin	Description
	1	+24V DC
	2	NC
	3	OV (GND)
	4	NC
	5	Functional Earth, FE

## Status Indicators

Indicator	Status	Description
Module status (MS)	Off	Module is not powered
	Alternate flashing (red-green)	Module is not configured
	Flashing green	Module is configured, but not in run mode
	Steady green	Module is powered, configured, and operating correctly (run mode)
	Flashing red	Flash update in progress. (configuration mode)
	Steady red	Unrecoverable fault detected (critical fault mode)
EtherNet/IP™ Network Status	Off	The module does not have an IP address and is operating in DHCP mode
	Flashing green	The module has an IP address, but no CIP connections are established
	Steady green	The module has an IP address and CIP connections (any transport class) are established
	Flashing red	An exclusive owner connection has timed out
LINK1 or LINK2 Status	Off	No link/no activity
	Steady green	Link
	Flashing amber	Port activity
450L-RX Status	Green	Communication OK
	Flashing red	Light curtain is in lockout state
	Red	No communication

## Specifications

Table 5 - General Specifications

Attribute	Value
Communication power supply voltage	24.0V DC±15% [Class 2 PELV]
Communication current consumption	340 mA/24V
Communication rate	EtherNet/IP 10/100 Mbps
Internet Protocol	IPv4 Addressing
CIP Sync	CIP sync/IEEE 1588 end-to-end transparent clock supported
CIP (safety) standards	IEC 61784-3-2: Functional safety fieldbuses - Additional specifications for CPF 2 regarding the following standards: <ul style="list-style-type: none"> <li>• IEC 61158-1: Overview and guidance for the IEC 61158 and IEC 61784 series</li> <li>• IEC 61158-3-2: Data-link layer service definition - Type 2 elements</li> <li>• IEC 61158-4-2: Data-link layer protocol specification - Type 2 elements</li> <li>• IEC 61158-5-2: Application layer service definition - Type 2 elements</li> <li>• IEC 61158-6-2: Application layer protocol specification - Type 2 elements</li> </ul>

Table 6 - Environmental Specifications

Attribute	Value
Operating temperature	-10...+55 °C (14...131 °F)
Storage temperature	-25...+75 °C (-13...+167 °F)
Relative humidity	Up to 95% (noncondensing)
Enclosure type rating	<ul style="list-style-type: none"> <li>• IP20 (unplugged)</li> <li>• IP65 (plugged)</li> </ul>
Vibration	10...55 Hz with amplitude of 0.35 mm (0.01 in)
Shock, operating	1000 shocks with 10 g (0.35 oz) and 16 ms pulse duration
Emissions	CISPR 11 Group 1, Class A
ESD Immunity	IEC 61000-4-2 and 61496-1 section 4.3.2 <ul style="list-style-type: none"> <li>• Normal Operation: 6 kV contact discharge, 8 kV air discharge</li> <li>• No Dangerous Fail: 8 kV contact discharge, 15 kV air discharge</li> </ul>
Radiated RF immunity	IEC 61000-4-3: <ul style="list-style-type: none"> <li>• 10.0V/m (80 MHz...1 GHz)</li> <li>• 3.0V/m (1.4...2 GHz)</li> <li>• 3.0V/m (2.0...2.7 GHz)</li> </ul>
EFT Immunity	IEC 61000-4-4, section 5 and IEC61000-6-7 and 61496-1 section 4.3.2 <ul style="list-style-type: none"> <li>• Normal Operation: ±1 kV</li> <li>• No Dangerous Fail: ±2 kV and severity level 3</li> </ul>
Surge transient immunity	IEC 61000-4-5, section 5 and 61000-6-7 and 61496-1 section 4.3.2 <ul style="list-style-type: none"> <li>• Normal operation: ±1 kV (Line to GND)</li> <li>• No dangerous failure: ±2 kV and severity level 3</li> </ul>
Conducted RF Immunity	IEC 61000-4-6, section 5 and 61000-6-7

Table 7 - Certifications (when product is marked)<sup>(1)</sup>

Attribute	Value
c-UL-us	UL Listed Industrial Control Equipment, certified for US and Canada.
CE	European Union compliant with applicable directives: <ul style="list-style-type: none"> <li>• 2014/30/EU EMC Directive</li> <li>• 2006/42/EC Machinery Directive</li> <li>• 2011/65/EU RoHS Directive (RoHS)</li> </ul>
RCM	Australian Radiocommunications Act, compliant with: <ul style="list-style-type: none"> <li>• AS/NZS CISPR 11; Industrial Emissions</li> </ul>
EtherNet/IP	ODVA conformance tested to EtherNet/IP specifications
KC	Korean Registration of Broadcasting and Communications Equipment, compliant with: <ul style="list-style-type: none"> <li>• Article 58-2 of Radio Waves Act, Clause 3</li> </ul>

(1) For declarations of conformity, certificates, and other certification details, see [rok.auto/certifications](#).

## **Waste Electrical and Electronic Equipment (WEEE)**

---



At the end of life, this equipment should be collected separately from any unsorted municipal waste.

---

Rockwell Automation maintains current product environmental information on its website at [rok.auto/pec](http://rok.auto/pec).

Your comments help us serve your documentation needs better. If you have any suggestions on how to improve our content, complete the form at [rok.auto/docfeedback](http://rok.auto/docfeedback). For technical support, visit [rok.auto/support](http://rok.auto/support).

Rockwell Otomasyon Ticaret A.Ş. Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400 EEE Yönetmeliğine Uygundur

Connect with us.

**rockwellautomation.com** ————— **expanding human possibility™**

AMERICAS: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

EUROPE/MIDDLE EAST/AFRICA: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

ASIA PACIFIC: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Allen-Bradley, expanding human possibility, Guardmaster, GuardShield, Rockwell Automation, RSLinx, RSLogix 5000, Studio 5000 are trademarks of Rockwell Automation, Inc.

EtherNet/IP is a trademark of ODVA, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

Publication 450L-IN008A-EN-P - August 2020

Copyright © 2020 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.



PN-529486

PN-529486

DIR 10005641605 Ver 01